

# Introduction to the TASKING Software Platform for ARM

MA101-869 (v1.2) October 10, 2014

Copyright © 2014 Altium BV.

All rights reserved. You are permitted to print this document provided that (1) the use of such is for personal use only and will not be copied or posted on any network computer or broadcast in any media, and (2) no modifications of the document is made. Unauthorized duplication, in whole or part, of this document by any means, mechanical or electronic, including translation into another language, except for brief excerpts in published reviews, is prohibited without the express written permission of Altium BV. Unauthorized duplication of this work may also be prohibited by local statute. Violators may be subject to both criminal and civil penalties, including fines and/or imprisonment. Altium, TASKING, and their respective logos are trademarks or registered trademarks of Altium Limited or its subsidiaries. All other registered or unregistered trademarks referenced herein are the property of their respective owners and no trademark rights to the same are claimed.

### **Table of Contents**

1. Introduction	
2. Organization of the Software Platform Repositories	
2.1. Device Stacks	
2.1.1. Peripherals	
2.1.2. Drivers	
2.1.3. Stack Services	
2.1.4. Adaptors	
2.2. Software Services	
3. Getting Started with the Software Platform Builder	7
3.1. Creating a Software Platform Document	7
3.2. Working with Device Stacks	
3.3. Configuring the Software Platform Plug-ins	12
3.4. Generating and Using the Source Code	13
3.5. Using the Sample Projects	
3.6. API Reference	17
3.7. Software Platform Builder Preferences	17
4. Tutorial Creating a File System on a RAM Disk	19
4.1. Create a Project	19
4.2. Add a Software Platform Document	20
4.3. Add the Services and Device Stacks	21
4.4. Configure the Software Platform Plug-ins	
4.5. Generate the Source Code	25
4.6. Write and Build the Application	
4.7. Debug the Application	29
5. Tutorial Using a Library Wrapper	31
5.1. Create a Project	
5.2. Add a Software Platform Document	32
5.3. Add the Services and Device Stacks	33
5.4. Configure the Software Platform Plug-ins	35
5.5. Generate the Source Code	
5.6. Configure the Pins	
5.7. Write and Build the Application	38
5.8. Connect the Board	39
5.9. Debug the Application	40
6. Tutorial Creating a Local Repository	43
6.1. Create a Local Repository Project	43
6.2. Add a Software Platform Plug-in	43
6.3. Modify the Software Platform Plug-in	44
6.4. Use the Local Repository	45
7. Content of the Default ARM Repositories	49
7.1. TASKING POSIX Repository	49
7.2. STM32 Repository	50
7.3. EFM32 Repository	51
7.4. Generic Repository	51
8. Glossary	57

# **Chapter 1. Introduction**

With TASKING Software Platform you can quickly create full-featured applications. A Software Platform is made up of software blocks, pieces of functionality that you can use in your application, like RTOS facilities, peripheral access or software protocols. The exact contents of a Software Platform depend on the need of your application.

The Software Platform Builder is used to manage your Software Platform. It is both a graphical editor and a code generator. Collections of software modules are delivered as Software Platform repositories.

The following figure shows the process to create your own Software Platform:



A Software Platform repository may contain any kind of software, but typical modules include interrupt services, timers, peripherals (hardware wrappers), drivers, kernel services (such as POSIX multithreading), device I/O, file system (FatFs), networking (TCP/IP), graphical user interface, etc.

The main reasons for having software modules are:

- Integration. Modules do not live isolated. Quite the contrary, they need to relate and interact with other modules. For instance, they often define interfaces which are implemented by other modules.
- Software reuse. Software reuse means effectively to be capable of encapsulating all the information of a component (hardware and/or software) in a consistent manner. Once this information is made

#### Introduction to the TASKING Software Platform for ARM

available, higher abstraction layers can use it to customize or configure the system after little (or none) user intervention.

Hide complexity. Writing software from scratch is a time-consuming activity. To write software that
accesses or controls a peripheral, you need a thorough knowledge of how the peripheral works: which
registers you need, which device specific commands to use, which communication protocols to use,
and which interrupts to handle.

The modules of the Software Platform repository take care of all these laborious lower level routines and instead provide you with an easy to use Application Programming Interface (API) for each peripheral that your application needs to control.

- Configurability. Embedded systems require very precise (compile-time) configuration mechanisms to manage their intrinsic complexity. A typical module may show different possible configurations that have direct impact on the final behavior of the software. The main idea behind compile-time configurations in embedded systems is to remove unnecessary functionality in order to enhance memory costs and real-time performance.
- Expandability. Altium, but also other parties, can adapt the modules and create their own modules.

For information how to use the Software Platform Builder, see Chapter 3, *Getting Started with the Software Platform Builder*.

### Chapter 2. Organization of the Software Platform Repositories

Software Platform repositories can contain numerous software modules that take care of lower level software routines as well as modules that offer extra functionality by providing you with a convenient API.

The Software Platform consists of device stacks and software services. This chapter describes both parts and how they are related.

#### 2.1. Device Stacks

Device stacks are all about making hardware peripherals available to application code through abstract and generic software interfaces. By placing more or less modules on a stack, you can choose the abstraction level you want to use in your application. The lowest level modules are specific for a particular hardware device. On top of that, you can stack higher level modules that provide more generic functionality to access the device. For example, at the higher, abstract level, you could choose to use a module to access a file system in your application. At the lower levels you still can select modules to decide which specific storage device you want to access (a hard drive, SD card, RAM drive, ...) Thus, the lower level modules are more specific for a particular peripheral while the higher level modules are less hardware specific and can even be used in combination with multiple peripheral devices.

You can use the Software Platform Builder editor to build device stacks.

#### Example

The following figure contains a HTTP device stack and a GUI device stack.



#### Introduction to the TASKING Software Platform for ARM

Each colored stack item represents a software module. In this example the HTTP stack consists of five modules, for each abstraction level one. The GUI Services requires Graphics Services and Pointer Services. In general, your application interfaces only to the highest level modules.

Device stacks may be composed of the following types of plug-ins: peripherals, drivers, stack services and adaptors.

#### 2.1.1. Peripherals

Peripherals (the green stack items) are the lowest level modules. They provide information for the higher layers of the stack to access the peripherals. Information such as the base address, interrupt assignment and any soft peripheral configuration is all stored in the peripheral.

# STM32F2XX EMAC

Peripheral modules are meant to be instantiated. Each instance then corresponds to one device of the given kind. Instances of peripherals do not normally require other instances.

In most situations, your application does not access the peripherals directly, because the application accesses them through the driver's interface on top of it.

For most peripherals you need to use the TASKING Pin Mapper to configure the connections between peripherals and port pins. For information about the TASKING Pin Mapper see *Using the TASKING Pin Mapper for ARM*.

#### 2.1.2. Drivers

Drivers (the yellow stack items) provide the next level of abstraction. They provide low-level access to specific hardware either via a peripheral or via another driver.



STM32F2XX EMAC Library Wrapper ST\_STM32F2XX\_ETHMAC\_1

The difference between a driver and a peripheral is well defined. The peripheral only defines basic information about the hardware but provides no further functionality. This basic information can be used by a driver which you can place on top of the peripheral.

Driver modules are meant to be instantiated. Each instance then corresponds to one device of the given kind. A driver instance requires one instance of the corresponding peripheral.

Drivers are hardware specific and so are the interfaces they offer. Hence, if your application contains code that accesses a driver's API, your application will be hardware dependent. Drivers still operate at a low abstraction level, and using a device at the driver level requires knowledge of that particular driver's interface.

Some drivers are available as library wrappers. They only offer an initialization routine which you can call from an application in order to configure pins, clocks and registers. After this initialization you can use the peripheral driver libraries from silicon vendors.

#### 2.1.3. Stack Services

Stack services (the blue stack items) are the most abstract layers of functionality.

TCP/IP Networking	
LWIP_1	36

Stack services provide standardized, hardware independent access to devices. Stack services are instantiated and ensure portability of your application. For example, if you run an application with a generic TCP/IP service, the application remains the same if you replace Ethernet with PPP and serial. A portable TCP/IP application works exactly the same, whether linked to a UART or a to an EMAC peripheral, since the Software Platform handles the lower level details.

#### 2.1.4. Adaptors

Adaptors (the grayed out stack items) provide a mechanism to link higher level services to hardware specific modules.

netif\_ethernet NETIF\_ETHERNET\_1

Adaptors do not have options you can change. By default, adaptors are not visible in the device stacks.

You can make adaptors visible in the Preferences dialog. See Section 3.7, Software Platform Builder Preferences.

#### 2.2. Software Services

Some services are static and not meant to be instantiated. They have no (direct) relationship with peripherals or other services. They facilitate common functionality, like POSIX multithreading support. They are shown in your editor at the left side of the **Device Stacks**. Those services may also be added automatically if required by other services.



### Chapter 3. Getting Started with the Software Platform Builder

The Software Platform Builder is the graphical interface to manage the plug-ins of the Software Platform repositories. The Software Platform Builder enables you to:

- · add peripherals
- · build device stacks
- · add software services
- · configure all software services and stack items
- generate code for your Software Platform

#### 3.1. Creating a Software Platform Document

To use the Software Platform Builder you need a project. The Software Platform Builder becomes available when you add a special Software Platform document to your project.

#### Add a Software Platform document to an existing project

- 1. First make sure you have an existing project. This is explained in the *Getting Started* manual of the toolset. In this example we assume you have a project called myproject.
- 2. From the File menu, select New » TASKING Software Platform Document.

The New Software Platform Document wizard appears.

- 3. Select the **Project** folder for the Software Platform document: type the name of your project (myproject) or click the **Browse** button to select a project.
- 4. In the **File name** field, enter a name for the Software Platform document, for example myproject.swpxmi and click **Finish**.

A new Software Platform document is added to the project with extension . swpxmi.

#### **TASKING Software Platform Builder editor**

Double-click on the Software Platform document to open it. The editor consists of two sections: the **Software Services** and the **Device Stacks**.

📅 *myproject.swpxmi 🛛		
A TASKING Software Platform - STM32	F217IG Generated code is out-of-date	e 🔥
Software Services	Device Stacks	
Software Platform Builder		
	(no stacks)	

The following toolbar icons are available:

lcon	Action	Description
C	Generate Code	Generates the source code and adds it to your project.
Î	Add	Adds software services and/or device stacks.
পী	Reload Repository	Reloads the repository. This can be necessary when you have updated the repository or when you changed the contents of a local repository.

#### 3.2. Working with Device Stacks

In the **Device Stacks** section you can build device stacks by adding modules from one or more Software Platform repositories. To build a device stack, you can start bottom-up by choosing a peripheral or you can start top-down by choosing a high-level stack service.

#### Add a software service or device stack

1. From the **Software Platform** menu, select **Add...** or click

The Add Software Services and Device Stacks dialog appears. The left side shows the stack services, software services and drivers. The right side shows all peripherals for the selected device. You can filter on a specific repository. By default all available repositories are listed.

🖸 Add	
Add Software Services and Device Stacks	
(i) Select additional software services and stack items	
<ul> <li>Select additional software services and stack items</li> <li>Repository: All Available Repositories</li> <li>Services and Drivers (1/27)         <ul> <li>HyperText Transfer Protocol</li> <li>IL19320 LCD Module Driver (parallel)</li> <li>JPEG Decoder</li> <li>JPEG Encoder</li> <li>Location Services</li> <li>Modem Services</li> <li>POSIX Debug Terminal</li> <li>POSIX Text Display</li> <li>RAM Disk</li> <li>SPFD5408 LCD Module Driver (parallel)</li> <li>ICP/IP Networking                 <ul> <li>UVIP_1</li> <li>USB Host Service</li> <li>UUID Generator</li> </ul> </li> </ul></li></ul>	<ul> <li>Peripherals (0/82)</li> <li>STM32F2XX ADC</li> <li>STM32F2XX CAN</li> <li>STM32F2XX CRC</li> <li>STM32F2XX CRC</li> <li>STM32F2XX DAC</li> <li>STM32F2XX DAG</li> <li>STM32F2XX DBG</li> <li>STM32F2XX DMA</li> <li>STM32F2XX DMA</li> <li>STM32F2XX EMAC</li> <li>STM32F2XX FLASH</li> <li>STM32F2XX FLASH</li> <li>STM32F2XX FSMC</li> <li>STM32F2XX HASH</li> <li>STM32F2XX HASH</li> <li>STM32F2XX IASH</li> <li>STM32F2XX IASH</li> <li>STM32F2XX IASH</li> <li>STM32F2XX IASH</li> <li>STM32F2XX IASH</li> <li>TM32F2XX IASH</li> <li>STM32F2XX IASH</li> </ul>
TCP/IP Networking	
TCP/IP Internet protocol suite	
?	OK Cancel

- 2. (Optional) Select a **Repository**.
- 3. Select the services, drivers and peripherals you want and click **OK**.

The new device stacks and software services appear in the TASKING Software Platform editor. Some software services appear automatically because they are required by other services or stack items.

If you do not see any peripheral, you probably selected an unsupported device or a generic architecture.

#### **Growing stacks**

Once you have added one or more stack items, you can use **Grow Stack Up** or **Grow Stack Down** from the context menu to complete your device stack.

📰 *myproject.swpxmi 🛛					
<b>O TASKING Software Platform - STM3</b>	2F217IG <u>1 error, 1 warning</u>	9		c	e 4
Software Services	Device Stacks				
Software Platform Builder					
Cortex-M Architecture					
Interrupt Management	TCP/IP Networking	X			
POSIX Multi-threading	LWIP_1	× [	Delete	De	lete
STM32 CMSIS Core	Missing Requirement	ት ( ይ (	Grow Stack Up Grow Stack Down		
	netif (	? /	API Reference		

The **Grow Stack Up** and **Grow Stack Down** menu items only become available if possibilities exist to extend the stack from the point of the selected stack item. Once you have partial device stacks on the document, you can extend them with other stack items to grow them to the abstraction level you wish to use in your application. For an interface description of a module select **API Reference**.

To grow a stack up:

1. Right-click on a plug-in of the existing stack and select Grow Stack Up.

The Grow Stack dialog appears. The dialog shows all possible combinations of sub-stacks that you can place on top of the selected module.

2. Select any module in any of the possible sub-stacks to extend the selected stack upwards and click **OK**.

To grow a stack down:

1. Right-click on a plug-in of the existing stack and select Grow Stack Down.

The Grow Stack dialog appears. The dialog shows all possible combinations of sub-stacks that you can place below the selected module.

🛄 Grow Stack Down			- • •
Grow Stack - LWIP_1			
(i) Add new stack items			
Link to Existing New Stacks			
Ethernet Protocol	Ethernet Protocol	Ethernet Protocol	Point-to-Point Protoco
Services	Services	Services	Services
ETHERNET_1	ETHERNET_1	ETHERNET_1	PPP_1 (2)
STM32 Ethernet MAC	ENC28J60 Driver	USB Host Service	Modem Services
DRV_STM32_EMAC_1	DRV_ENC28J60_1	USBHOST_1	MODEM_1
STM32F2XX EMAC	STM32 SPI Driver	DWC USB OTG Driver	POSIX Serial Device I/(
STM32F2XX_ETH	DRV_STM32_SPI_1	DWC_USB_OTG_1	SERIAL_1
	STM32F2XX SPI	STM32F2XX USB OTG	STM32 USART Driver
	STM32F2XX_SPI1	STM32F2XX_USB_OTG_HS	DRV_STM32_USART_1
			STM32F2XX USART
			STM32F2XX_USART1
•			······································
?			OK Cancel

2. Select any module in any of the possible sub-stacks to extend the selected stack downwards and click **OK**.

Note that when you click on a Missing Requirement, the Grow Stack dialog appears automatically.

The Grow Stack dialog contains two tabs, one to form a new stack and one to link two existing stacks. If your document contains partial stacks which potentially can be combined into a single stack, it will be visible in the **Link to Existing** tab. You can link them together to form a complete stack. Otherwise select the **New Stacks** tab.

#### Example

The following figure shows some device stacks.



Note that some drivers (ILI9320 LCD Module Driver in this example) do not require a peripheral, because the device is accessed through the memory controller.

#### 3.3. Configuring the Software Platform Plug-ins

You can configure peripherals, drivers, stack services and software services. Stack items can have individual options and/or global options. Individual options are only valid for a specific stack item, global options are valid for all stack items of the same type. When you click on an item in the Software Platform Builder, configuration options appear in the Properties view.

For example, when you click HyperText Transfer Protocol, a view similar to the following appears:

🔲 Properties 🛛			1		
HyperText Transfer Protocol					
Property	Value	Туре	Range / Prototype		
▲ Stack Item Options					
ID	HTTP_1				
Global Options					
HTTPS	false	BOOLEAN			
•		1		•	

A plug-in option may automatically set other plug-in options and may even add automatic services. For example, in this case when you set HTTPS to true this adds the Matrix SSL / TLS services automatically.

#### **Connecting peripherals to pins**

For most peripherals you need to specify which pins are used. You can do this with the TASKING Pin Mapper.

1. Add a TASKING Pin Mapper Document (File » New » TASKING Pin Mapper Document) and configure the pins as explained in *Using the TASKING Pin Mapper for ARM.* 

This results in a file called myproject.pincfg.

2. From the **Pin Mapper** menu, select **Generate Code** or click

The Pin Mapper sources are generated and are added to your project in the folder PinMapper.

The Software Platform uses the output of the TASKING Pin Mapper to configure the peripherals. For example, click on the STM32F2XX I2C peripheral to show its properties.

Properties 🛛			러		
STM32F2XX I2C				民 🤅	D
Property	Value	Туре	Range / Prototype		
▲ Stack Item Options					
ID	STM32F2XX_I2C1				
Base Address	0x40005400	UINT32			
Pin Configuration	pincfg_i2c1_init	CALLBACK	void (*pinconfig)(void)		
Interruptev	31 💦 This function is g	enerated by the Pin Map	oper and sets up the pins for th	e periphera	al.
Interrupter	32	INTERRUPT	-1255		

The Software Platform uses the function pincfg\_i2c1\_init to configure the STM32F2XX I2C peripheral. This function has been generated by the TASKING Pin Mapper.

#### 3.4. Generating and Using the Source Code

When you have added, configured and/or updated the Software Platform plug-ins you are ready to add the Software Platform sources to your project.

#### Generate source code

From the Software Platform menu, select Generate Code or click Identified.

The Software Platform sources are retrieved from the repositories and are added to your project in the folder <code>SoftwarePlatform</code>. Tool options such as defines and include paths are added to the Generated options field in your project properties. Options can also be set on the <code>SoftwarePlatform</code> folder and/or sub-folders.



#### Using the Software Platform sources

A plug-in defines a set of functionality - that is, types, defines, structures and functions. This functionality is accessible from your application. You can find the generated files in the SoftwarePlatform folder of your project. To use the generated files, you must add a #include statement into your top-level source file (typically main.c):

#include "swplatform.h"

All other required header files needed to access the devices in the stack are included (made available) as a result of including this file.

The following is an example of swplatform.h generated as a 'wrapper' around the active project's Software Platform:

```
- -
h swplatform.h 🛛
  ⊕ * Software Platform Generated File.
    #ifndef _SWP_SWPLATFORM_H
    #define _SWP_SWPLATFORM H
    /* Stack Item ID's */
   #include "devices.h"
    /* Software Services */
    #include <interrupts.h>
    #include <matrixsslApi.h>
    #include <pthread.h>
   #include <sched.h>
    #include <semaphore.h>
    /* Top Level Stack Items */
    #include <http.h>
    /* Lower Level Stack Items */
    #include <ethernet e.h>
    #include <lwip.h>
    #include <lwipopts.h>
    #include <drv stm32 cfgtypes.h>
    #include <drv stm32 emac.h>
    #endif /* SWP SWPLATFORM H */
    4
                                           b
```

You can now use the functions of the Software Platform in your sources. For example,

```
int main( void )
{
    http_t *http;
    http = http_open(HTTP_1);
    if (!http)
    {
        fprintf(stderr,"HTTP open failed\n");
        exit(1);
    }
    ...
}
```

#### 3.5. Using the Sample Projects

A Software Platform repository may contain a number of sample projects. These examples can be a good starting point for your own project.

You can import Software Platform repository examples via the Import wizard in Eclipse.

#### Import an existing Software Platform project

1. From the File menu, select Import.

The Import dialog appears.

2. Select TASKING Software Platform » Example Projects and click Next.

The Import Software Platform Examples dialog appears.

Import Software Platform Example Projects		
Import Software Platform examples		
Select the Software Platform examples to import into the current wor	kspace	
Example projects:	E E	
▲ STMicroelectronics STM32	~	Select All
STM320518-EVAL		
STM3210B-EVAL		Deselect All
STM3210C-EVAL	=	
STM3210E-EVAL		
a 🔲 STM322xG-EVAL		
STM322xG_ADC		
STM322xG_Audio_Service		
STM322xG_Bluetooth_HID		
STM322xG_Bluetooth_RFCOM		
STM322xG_CAN		
STM322xG_EEPROM		
STM322×G_EXTI		
STM322xG_GPIO		
STM322xG_GUI		
STM322xG_HTTPS_Webserver	-	
Description:		
STMicroelectronics STM32 Evaluation Board examples	*	
	*	
Sack Next > Finish		Cancel

3. Select the Software Platform examples you want to import into the current workspace and click **Finish**.

The original examples are copied into the current workspace and the Software Platform sources and Pin Mapper sources are generated.

Once the examples are in your workspace you can build the projects.

#### 3.6. API Reference

Each repository contains detailed descriptions of its contents. You can access this documentation from the Help menu (Help » Help Contents » Software Platform Repository Reference).

#### Accessing help on individual drivers or services

• Right-click on a stack item or a software service and select API Reference.

POSIX Multi-threading			
	×	Delete	Delete
	Ŷ ₽	Grow Stack Up Grow Stack Down	
	?	API Reference	

Help appears on the individual stack item.

#### 3.7. Software Platform Builder Preferences

You can use the Preferences dialog in Eclipse to specify how the Software Platform Builder should operate.

#### To set preferences

1. From the **Window** menu, select **Preferences**.

The Preferences dialog appears.

2. Select TASKING » Software Platform Builder.

The Software Platform Builder page appears.

3. Set your preferences and click **OK**.

You can set the following preferences:

#### Generate code on save

By default the Software Platform Builders asks if you want to generate code when you save a document (**Prompt**). You can choose to do this automatically (**Always**) or **Never**.

#### **Software Platform Editor**

• Show adaptors and internal items. By default, adaptors (see Section 2.1.4, *Adaptors*) are not visible in the device stacks. This option can be useful when you need support from Altium or when you develop your own plug-ins. Normally, you do not need this option.

#### **Properties View**

- Show resource info. By default, information about the resource is not visible in the Properties view. You can use the Show Resource Info button ((1)) in the Properties view to toggle the resource information on or off, or you can use this preference option to turn resource information on by default.
- Show hidden options. By default, several plug-in options are not visible in the Properties view. This option can be useful when you need support from Altium or when you develop your own plug-ins. Normally, you do not need this option.

# Chapter 4. Tutorial Creating a File System on a RAM Disk

In this tutorial we show how to create an example Software Platform project. You will learn how to use the software to create a file system on a RAM disk. This example uses the simulator, so no additional hardware is required.

#### 4.1. Create a Project

The first step is to create a C project. This is explained in detail in the *Getting Started* manual of the toolset, but for this tutorial we repeat this step.

1. From the File menu, select New » TASKING ARM C/C++ Project

The New C/C++ Project wizard appears.

2. Enter a name for your project, for example Generic\_FileSystem.

In the Location field you will see the location where the new project will be stored.

- 3. In the **Project type** box you can select whether to create an application or a library.
  - Expand TASKING ARM Application and select Empty Project. This creates a project without a C source file.
  - Click **Next** to continue.

The ARM Project Settings page appears.

New C/C++ Project	- • <b>×</b>
ARM Project Settings Select a processor to continue	
Processor selection	
>       Select by Architecture         >       Select by Core         >       Atmel         >       Freescale         >       Infineon         >       NXP         >       Silicon Labs         >       Spansion         >       STMicroelectronics         >       Texas Instruments	Expand All Expand Selected Collapse All
Actions Add startup file(s) to the project Add linker script file to the project	
Kext > Finish	Cancel

#### Introduction to the TASKING Software Platform for ARM

- Select the target processor core or architecture for which you want to build the application. For example, architecture ARMv7-M. Afterwards you can always change the processor in the **Project** » **Properties for** dialog.
- 5. Leave the rest of the dialog as is and click Next.

The Target Settings page appears.

- 6. In order to debug your project you need to create a debug configuration.
  - Select a target. You can select a target board or a simulator. For this tutorial we select the **ARM Simulator**.
  - Enable Add launch configuration to the project. This allows you to debug your project.
  - Leave the other tabs as is. For more information, see section *Creating a Customized Debug Configuration* in Chapter Using the Debugger of the TASKING VX-toolset for ARM User Guide.
- 7. Click Finish to finish the wizard and to create the project.

The project has now been created and is the active project.

#### 4.2. Add a Software Platform Document

Now that we have a project we can add a Software Platform document.

1. From the File menu, select New » TASKING Software Platform Document.

The New Software Platform Document dialog appears.

2. Leave the project name and file name as is and click Finish.

A new Software Platform document is added to the active project (Generic\_FileSystem.swpxmi).

#### **TASKING Software Platform Builder editor**

Double-click on the Software Platform document Generic\_FileSystem.swpxmi to open it. The editor consists of two sections: the Software Services and the Device Stacks.

📅 *Generic_FileSystem.swpxmi 🛛			
TASKING Software Platform - DEFAULTCPU <u>Generated code is out-of-date</u>	c	ð	পী
Software Services Device Stacks			
Software Platform Builder			
(no stacks)			

#### 4.3. Add the Services and Device Stacks

Now it is time to create our RAM disk and create a file system. What we need is a RAM disk, a storage system and terminal services for debugging.

#### Add a software service or device stack

1. From the **Software Platform** menu, select **Add...** or click

The Add Software Services and Device Stacks dialog appears. The left side shows the stack services, software services and drivers. The right side shows all peripherals for the selected device. In this tutorial you do not see any peripheral, because we selected a generic architecture.

C Add	
Add Software Services and Device Stacks	
<ol> <li>Select additional software services and stack items</li> </ol>	
Repository:       TASKING POSIX implementation - platform:/pl         Services and Drivers (2/6)       POSIX Message Queues         POSIX Multi-threading       POSIX Signals         POSIX Debug Terminal       DBG_TERMINAL_1         POSIX Storage System       POSIX Text Display	ugin/com.tasking.swp.repository.posix/SoftwarePlatform/  Peripherals (0/0) No peripherals available in selected repository.  Total selection count: 2
POSIX Storage System	
File systems	
?	OK Cancel

2. From the Repository, select TASKING POSIX implementation

Only services and drivers from the selected repository are shown.

3. From the Services and Drivers, select **POSIX Debug Terminal** and **POSIX Storage System** and click **OK**.

The new device stacks and software services appear in the TASKING Software Platform editor. Some software services appear automatically because they are required by other services or stack items.

🔁 *Generic_FileSystem.swpxmi 🛛		- 8
<b>8</b> TASKING Software Platform - DEFA	ULTCPU <u>1 error, 1 warning</u>	🖻 🖻 🥠
Software Services	Device Stacks	
Software Platform Builder &		
POSIX Filesystem Mounting	POSIX Debug Terminal	POSIX Storage System
POSIX Standard Device I/O	DBG_TERMINAL_1	POSIX_FILESYSTEM_1
		Missing Requirement
		blockio

As you can see we are missing a requirement. Block device I/O is needed for communication between the RAM Disk and the Storage System. We will add this now.

1. Click on the **Missing Requirement** stack item.

The Grow Stack dialog appears. The dialog shows all possible combinations of sub-stacks that you can place below the selected module.

💟 Grow Stack Down	
Grow Stack - POSIX_FILESYSTEM_1	
<ol> <li>Add new stack items</li> </ol>	
Link to Existing New Stacks	
POSIX Standard File I/O (PSE52) BLOCKIO_1	
RAM Disk RAMDISK_1	
?	OK Cancel

2. We want to add a RAM Disk. To do this, in the **New Stacks** tab, click on **RAM Disk** to select it and click **OK**.

Your Software Platform now looks like this:

🔁 *Generic_FileSystem.swpxmi 🛛		
A TASKING Software Platform - DEFA	ULTCPU Generated code is out	t-of-date 💽 🖻 🦣
Software Services	Device Stacks	
Software Platform Builder &		
POSIX Filesystem Mounting		
POSIX Standard Device I/O		POSIX Storage System
		POSIX_FILESYSTEM_1
		POSIX Standard File I/O (PSE52)
		BLOCKIO_1
	POSIX Debug Terminal	RAM Disk
	DBG_TERMINAL_1	RAMDISK_1

#### 4.4. Configure the Software Platform Plug-ins

You can configure peripherals, drivers, stack services and software services. Stack items can have individual options and/or global options. Individual options are only valid for a specific stack item, global options are valid for all stack items of the same type. When you click on an item in the Software Platform Builder, configuration options appear in the Properties view.

In this tutorial we want to redirect Standard Output and Standard Error to the POSIX Debug Terminal.

1. Click on the **POSIX Standard Device I/O** software service.

A view similar to the following appears:

🖹 Problems 📮 Console 🔲 Prop	erties 🛿		2 - 0
POSIX Standard Device I/	o		國 (1)
Property	Value	Туре	Range / Prototype
Software Service Options			
Standard Input	false	BOOLEAN	
Standard Output	false	BOOLEAN	
Standard Error	false	BOOLEAN	
DEV_MAX	8	UINT8	>=1
•	111		

2. Change the value of Standard Output and Standard Error to true.

New properties for device name and buffer type appear. When you hover the mouse over a property balloon help appears.

🖹 Problems 📮 Console 🔲 Propertie	s 🕅		2 - 1
POSIX Standard Device I/O			<b>I</b>
Property	Value	Туре	Range / Prototype
▲ Software Service Options			
Standard Input	false	BOOLEAN	
Standard Output	true	BOOLEAN	
stdout device name	None	INSTANCE	
stdout buffering type	None	Name of device for 'stdout'	
Standard Error	true	BOOLEAN	
stderr device name	None	INSTANCE	
stderr buffering type	None	ENUM	
DEV_MAX	8	UINT8	>=1
•			•

3. Change the value of stdout device name and stderr device name to DBG\_TERMINAL\_1. This is the ID of the POSIX Debug Terminal stack item.

The properties for POSIX Standard Device I/O should now look like this:

🖹 Problems 📃 Console 🔲 Prope	rties 🛛		2 - 1
POSIX Standard Device I/0	<b>b</b>		<b></b>
Property	Value	Туре	Range / Prototype
▲ Software Service Options			
Standard Input	false	BOOLEAN	
Standard Output	true	BOOLEAN	
stdout device name	DBG_TERMINAL_1	INSTANCE	
stdout buffering type	None	ENUM	
Standard Error	true	BOOLEAN	
stderr device name	DBG_TERMINAL_1	INSTANCE	
stderr buffering type	None	ENUM	
DEV_MAX	8	UINT8	>=1
•			· · · · · · · · · · · · · · · · · · ·

#### 4.5. Generate the Source Code

Now that you have added and configured the Software Platform plug-ins you are ready to generate the Software Platform sources for your project.

• From the Software Platform menu, select Generate Code or click de.

The Software Platform sources are retrieved from the repositories and are added to your project in the folder SoftwarePlatform. Tool options such as defines and include paths are added to the Generated

options field in your project properties. Options can also be set on the SoftwarePlatform folder and/or sub-folders.

Generic\_FileSystem [ Active - Debug ]



Also, every time you save the changes you have made to your Software Platform document, a dialog appears asking if you want to generate the code. You can change this behavior in the Preferences dialog as explained in Section 3.7, *Software Platform Builder Preferences*.



#### 4.6. Write and Build the Application

Now that the Software Platform sources have been generated we can use it to write an application. In this tutorial we mount a file system on a RAM disk, create a directory, create a file and list the directory contents. This application uses the TASKING POSIX implementation.

1. From the File menu, select New » Source File.

The New Source File dialog appears.

2. Enter the source file name main.c and click Finish.

The new file main.c is created and ready for editing in the editor view.

3. Add the following C source to the file main.c.

#include <stdio.h>
#include <swplatform.h>

```
#include <fs.h>
#include <dirent.h>
#include <sys/stat.h>
#define SRC_DEV "/dev/BLOCKIO_1"
#define DIR_SEP "/"
/* list the directory contents */
static int dirlisting( const char *path )
{
    DIR
                    *dir;
    struct dirent
                    *dirent;
    struct stat
                    buf;
                    path_to_file[PATH_MAX];
    char
    dir = opendir(path);
    if ( dir != NULL )
    {
        printf( "Contents of folder \"%s\":\n", path );
        while (1)
        {
            dirent = readdir(dir);
            if (dirent == NULL)
            {
                break;
            }
            sprintf(path_to_file, "%s%s%s", path, DIR_SEP, dirent->d_name);
            if (stat(path_to_file, &buf) == 0)
            {
                if (S_ISDIR(buf.st_mode))
                {
                    printf("[DIR]\t%s/\n", dirent->d_name);
                else if (S_ISREG(buf.st_mode))
                {
                    printf("[FILE]\t%s\t(%d bytes)\n", dirent->d_name,
                            (int)(buf.st_size) );
                }
                else
                {
                    printf("[UNK]\t%s\n", dirent->d_name);
                }
            }
        }
        printf( "\n" );
        if (closedir(dir) != 0)
        {
```

```
return -1;
        }
        return 0;
    }
    return -1;
}
int main(void)
    int rc;
    /* Create the RAM disk */
    rc = mkfs(SRC_DEV, "fatfs", 0, NULL /* "Ramdisk" */, false);
    if (rc < 0)
    {
        printf("Error: mkfs returned %d\n", rc);
    }
    printf( "Mount filesystem\n" );
    /* Try to mount the first partition ... */
    rc = mount(SRC DEV, "/ramdisk", "fatfs", 1,
               MOUNT_FLAG_RDWR | MOUNT_FLAG_SYNC);
    if (rc)
    {
        /* ... and if that fails try the entire disk */
        rc = mount(SRC_DEV, "/ramdisk", "fatfs", 0,
                   MOUNT_FLAG_RDWR | MOUNT_FLAG_SYNC);
        if (rc)
        {
            printf("Error: mount returned %d\n", rc);
        }
    }
    dirlisting("/ramdisk");
    printf( "Create directory\n" );
    rc = mkdir( "/ramdisk/dir1", S_IRWXU | S_IRWXG | S_IRWXO );
    if (rc)
    {
        printf("Error: mkdir returned %d\n", rc);
    }
    FILE *f = fopen("/ramdisk/test.txt", "w");
    if (f == NULL)
    {
        printf("Error: fopen returned NULL\n");
    }
    fwrite("TEST", 4, 1, f);
    fclose(f);
```

```
dirlisting("/ramdisk");
}
```

4. From the **File** menu, select **Save** (Ctrl+S) or click 📃.

The file will be saved.

5. From the **Project** menu, select **Build Generic\_Filesystem** or click im.

The project is built and a Debug folder is created with the absolute object file Generic\_Filesystem.abs.

#### 4.7. Debug the Application

We are now ready to use the simulator to run and debug the application.

1. From the **Debug** menu select **Debug Generic\_Filesystem**.

Alternatively you can click the <sup>\$%</sup> button in the main toolbar.

The TASKING Debug perspective is associated with the TASKING C/C++ Debugger. Because the TASKING C/C++ perspective is still active, Eclipse asks to open the TASKING Debug perspective.

2. Optionally, enable the option Remember my decision and click Yes.

The debug session is launched. This may take a few seconds. The application suspends when entering the main() function.

TASKING Debug - Generic_FileSystem/SoftwarePlatform/m	ain.c - ARM Eclipse IDE vx.yrz				
File Edit Source Refactor Navigate Search Project	Debug Window Help				
: ◘ ▾ 🗑 💩   🖬 🕪 : @ ▾ @ ▾ C ▾ @ ▾	🄑 🗟 🕶 🞯 🚳 🕸 🔹 🔌	14 🕹 🕩 💷 👪	3. 🔿 .e i+	- 7 🕺 🗟 🍃	A 🔹 🎑
		Quick Access	Ē	TASKING C/C+	+ 🕸 TASKING Debug
🏇 Debug ⊠ 🦓 😹 🚺 🕶 🗖	🗱 Variables 🖾 💊 Breakpoints	<u> </u>	1888 Registers	3	A - D
Generic_FileSystem [TASKING C/C++ Debugger] A APA ARM Simulator - ARMy7-M (9/3/14 12:33 PM) (Sur	🖄 🍂 🕒 🧯	*** 🔁 🗗 🎽	Group: Core	•	
▲ m <sup>3</sup> Thread [ARM] (Suspended)	Name	Value	Name	Value	Usage
1 main() main.c:60 0x00001d5c 2 Paret Handlar0 estat c:260 0x0000420c	f <identifier 'f'="" is="" unknown.=""></identifier>		RO	0x0	<b>^</b>
			R1 P2	0x0	
	•	•	R3	0x80000	
		A	R4	0x0	-
۰ III ۲	4	+	•		F
Generic_FileSystem.swpxmi	)(	🚮 Disassembly 🛛 🔚	Outline		
<pre>&gt; oint main(void)</pre>		Address	1		
{		Address:			
int rc;		<pre>int main(void) {</pre>			Â
/* Create the RAM disk */	"Ramdick" */ falce).	int rc;			
if (rc < 0)	E	/* Create the	RAM disk */		
<pre>{     printf("Error: mkfs returned %d\n" </pre>	, rc);	00001d5c f0 b5	push	{r4-r7,lr}	andich" #/ false
}		00001d5e 00 23	mov	r3, #0x0	amuisk '/, taise
<pre>printf( "Mount filesystem\n" );</pre>	-	00001d60 4d f8 04	3d str	r3, [r13, #-4]!	-
•	•	•			•
📮 Console 🛿 🧕 Tasks 🛛 🕞	: 🚮 🛃 🖳 🕶 🗂 🗖 🗖 🗍 🌔	🚺 Memory 🛛 🛛 🚺	🕈 🛃 1010 1010	0, D 🔂 📰	🔄 🗉 🗸 🗸 🗖 🗖
Debug [Generic_FileSystem]	I	Monitors 🐈 🗙 💥			
Selected CPU type: ARMv7M					
Register file: C:/Program Files (x86)/ Communication: Simulator	TASKING/carm vx.yrz/etc/				
Debug Instrument Module: disimarm					
USING JAVA LINK VERSION 1.141 Starting Debugger	-				
·	•				
	Writable	Smart Insert 60 : 1			

3. To resume execution, from the **Debug** menu, select **Resume**, or press **F8**, or click on the **Resume** button (**I**).

The application is executed. The FSS view now shows:

Mount filesystem Contents of folder "/ramdisk": Create directory Contents of folder "/ramdisk": [DIR] DIR1/ [FILE] TEST.TXT (4 bytes)

Congratulations, you just made an example Software Platform application.

For more information about debugging an application see Chapter *Debugging your Application* of the *Getting Started with the TASKING VX-toolset*, and Chapter *Using the Debugger* of the *TASKING VX-toolset* for ARM User Guide.

# **Chapter 5. Tutorial Using a Library Wrapper**

In this tutorial we show how to use the Software Platform as a wrapper to access library functions from STMicroelectronics. You will learn how to use a UART for communication over a serial port. This example uses the STM3210E-EVAL evaluation board.

#### 5.1. Create a Project

As explained in the previous chapter, the first step is to create a C project.

1. From the File menu, select New » TASKING ARM C/C++ Project

The New C/C++ Project wizard appears.

2. Enter a name for your project, for example USART\_printf.

In the Location field you will see the location where the new project will be stored.

- 3. In the **Project type** box you can select whether to create an application or a library.
  - Expand TASKING ARM Application and select Empty Project. This creates a project without a C source file.
  - Click Next to continue.

The ARM Project Settings page appears.



Select the target processor core or architecture for which you want to build the application. In this
example, we select STM32F103ZG. Afterwards you can always change the processor in the Project

 Properties for dialog.

5. Leave the rest of the dialog as is and click Next.

The Target Settings page appears.

- 6. In order to debug your project you need to create a debug configuration.
  - Select a target. For this tutorial select STMicroelectronics STM3210E-Eval board.
  - For connection select J-Link over USB or ST-LINK over USB.
  - Enable Add launch configuration to the project. This allows you to debug your project.
  - Leave the other tabs as is. For more information, see section *Creating a Customized Debug Configuration* in Chapter Using the Debugger of the TASKING VX-toolset for ARM User Guide.
- 7. Click Finish to finish the wizard and to create the project.

The project has now been created and is the active project.

#### 5.2. Add a Software Platform Document

Now that we have a project we can add a Software Platform document.

1. From the File menu, select New » TASKING Software Platform Document.

The New Software Platform Document dialog appears.

2. Leave the project name and file name as is and click Finish.

A new Software Platform document is added to the active project (USART\_printf.swpxmi).

#### **TASKING Software Platform Builder editor**

Double-click on the Software Platform document USART\_printf.swpxmi to open it. The editor consists of two sections: the Software Services and the Device Stacks.

ि *USART_printf.swpxmi ⊠		-	- D	
TASKING Software Platform - STM32F103ZG Generated code is out-of-date				
Software Services	Device Stacks			
Software Platform Builder				
	(no stacks)			

#### 5.3. Add the Services and Device Stacks

Now it is time to add a USART peripheral and connect a library wrapper to it.

#### Add a software service or device stack

1. From the **Software Platform** menu, select **Add...** or click

The Add Software Services and Device Stacks dialog appears. The left side shows the stack services, software services and drivers. The right side shows all peripherals for the selected device.

🖸 Add	
Add Software Services and Device Stacks	
<ol> <li>Select additional software services and stack items</li> </ol>	
Repository: TASKING Device Support for STM32 - platform	m:/plugin/com.tasking.swp.repository.stm32/SoftwarePlatform/
Services and Drivers (0/3)	Peripherals (1/74)
<ul> <li>STM32 CMSIS Core</li> <li>STM32F107 Ethernet Access Library</li> <li>STM32F10X Peripheral Access Library</li> </ul>	STM32F10X I2S         STM32F10X IWDG         STM32F10X PWR         STM32F10X RCC         STM32F10X RTC         STM32F10X SDIO         STM32F10X SDIO         STM32F10X SDIO         STM32F10X VIM         STM32F10X SDIO         STM32F10X SDIO         STM32F10X USART         STM32F10X_USART1         STM32F10X_USART2         STM32F10X_USART3         STM32F10X_UART4         STM32F10X_UART5
	Total selection count: 1
STM32F10X USART STMicroelectronics STM32F10X Universal Synchronous/A	Asynchronous Receiver/Transmitter
0	OK Cancel

#### 2. From the Repository, select TASKING Device Support for STM32

Only services and drivers and peripherals from the selected repository are shown.

#### 3. From the Peripherals, select STM32F10X\_USART1 and click OK.

The new device stack and software service appear in the TASKING Software Platform editor. The STM32 CMSIS Core, STM32 Pin Mapper and STM32F10X Peripheral Access Library software services appear automatically because it is required by the peripheral.

🔁 *USART_printf.swpxmi 🛛						
A TASKING Software Platform - STM	/32F103ZG	Generated code is	out-of-date	c	<b>8</b> 1	ო
Software Services	Device Sta	acks				
Software Platform Builder						
STM32 CMSIS Core						
STM32 Pin Mapper						
STM32F10X Peripheral Access Library						
	STM32F	10X USART				
	STM32F1	IOX_USART1				

4. Right-click on the STM32F10X USART stack item and select Grow Stack Up from the pop-up menu.

The Grow Stack dialog appears. The dialog shows all possible combinations of sub-stacks that you can place on top of the selected module.

🖸 Gro	ow Stack Up				
Grow	Grow Stack - STM32F10X_USART1				
(i) A	dd new stack items				
Lin	k to Existing New Stacks				
				*	
		HyperText Transfer			
		Protocol HTTP_1			
	Location Services	TCP/IP Networking			
I		LWIP_1			
	Simcom AT GPS Service	Point-to-Point Protocol	Location Services		
		Services			
	Modem Services	Modem Services	GPS-NMFA Services		
		MODEM 1			
	POSIX Serial Device I/O	POSIX Serial Device I/O	POSIX Serial Device I/O		
	SERIAL_1	SERIAL_1	SERIAL_1		
9	STM32 USART Driver	STM32 USART Driver	STM32 USART Driver	STM32F10X USART Library Wrapper	
[	DRV_STM32_USART_1	DRV_STM32_USART_1	DRV_STM32_USART_1	ST_STM32F10X_USART_1	
				4	
(?)				OK Cancel	

5. We want to access the STMicroelectronics functions that are present in the Software Platform repository by means of a library wrapper. To do this, in the **New Stacks** tab, click on **STM32F10X USART Library Wrapper** to select it and click **OK**.

Your Software Platform now looks like this:

🔁 *USART_printf.swpxmi 🛛	c	
A TASKING Software Platform - ST	M32F103ZG Generated code is out-of-date 🕑 🗃	ু 🖓
Software Services	Device Stacks	
Software Platform Builder		
STM32 CMSIS Core		
STM32 Pin Mapper	STM32F10X USART	
STM32F10X Peripheral Access Library	ST_STM32F10X_USART_1	
	STM32F10X USART	
	STM32F10X_USART1	

#### 5.4. Configure the Software Platform Plug-ins

You can configure peripherals, drivers, stack services and software services. Stack items can have individual options and/or global options. Individual options are only valid for a specific stack item, global options are valid for all stack items of the same type. When you click on an item in the Software Platform Builder, configuration options appear in the Properties view.

In this tutorial we want to change the USART communication mode of the library wrapper.

1. Click on the STM32F10X USART Library Wrapper stack item.

A view similar to the following appears:

🖁 Problems 📮 Console 🔲 Properties 🛛 🛃 🛃			
STM32F10X USART Library Wrapper			
Property	Value	Туре	
▲ Stack Item Options			
ID	ST_STM32F10X_USART_1		
USART_BaudRate	115200	UINT32	
USART_WordLength	USART_WordLength_8b	ENUM	
USART_StopBits	USART_StopBits_1	ENUM	
USART_Parity	USART_Parity_No	ENUM	
USART_Mode	USART_Mode_Rx	ENUM	
USART_HardwareFlowControl	${\sf USART\_HardwareFlowControl\_None}$	ENUM	
٠ III			Þ

2. Change the value of USART\_Mode to USART\_Mode\_Rx + USART\_Mode\_Tx.

The properties for STM32F10X USART Library Wrapper should now look like this:

📳 Problems 📮 Console 🔲 Properties 🕱 🛛 📑 💆			
STM32F10X USART Library Wrapper			
Property Value 7			
✓ Stack Item Options			
ID	ST_STM32F10X_USART_1		
USART_BaudRate	115200	UINT32	
USART_WordLength	USART_WordLength_8b	ENUM	
USART_StopBits	USART_StopBits_1	ENUM	
USART_Parity	USART_Parity_No	ENUM	
USART_Mode	USART_Mode_Rx + USART_Mode_Tx	ENUM	
USART_HardwareFlowControl	${\sf USART\_HardwareFlowControl\_None}$	ENUM	
•			۰.

#### 5.5. Generate the Source Code

Now that you have added and configured the Software Platform plug-ins you are ready to generate the Software Platform sources for your project.

1. From the **Software Platform** menu, select **Generate Code** or click

The Software Platform sources are retrieved from the repositories and are added to your project in the folder <code>SoftwarePlatform</code>. Tool options such as defines and include paths are added to the Generated options field in your project properties. Options can also be set on the <code>SoftwarePlatform</code> folder and/or sub-folders.

- USART\_printf [ Active Debug ]
  - Includes
  - a 🔁 SoftwarePlatform
    - Configuration
    - b 🗁 cstart
    - b 🔁 platform
    - b > > services
    - USART\_printf.launch
    - USART\_printf.lsl
    - USART\_printf.swpxmi
- 2. From the File menu, select Save (Ctrl+S) or click 🗒.

The Software Platform document will be saved.

#### **5.6. Configure the Pins**

Now that the Software Platform software services and device stacks are defined, you need to configure the pins of the peripheral. In this case the USART. You can do this with the TASKING Pin Mapper.

1. From the File menu, select New » TASKING Pin Mapper Document.

The New TASKING Pin Mapper Document wizard appears.

- 2. Select the **Project** folder for the Pin Mapper document: type the name of your project (USART\_printf) or click the **Browse** button to select a project.
- 3. In the File name field, enter a name for the Pin Mapper document, for example USART\_printf.pincfg and click Next.

The Device and Package page appears.

🛄 New TASKING Pin Mapper Document	- • ×
Device and Package	
Select device and package for the new pin mapper document	
Processor Settings	
Only show items for STM32F103ZG Show all	
STMicroelectronics	
STM32F103	
STM32F103Z(F-G)Hx STM32F103Z(F-G)Hx	
	Cancel

4. Select the processor and package that is used on the board and click **Finish**. In our example, we use the STM3210E-Eval board, which has a STM32F103Z(F-G)Tx and package LQFP144.

A pin configuration file with extension .pincfg is added to the existing project. Because the TASKING C/C++ perspective is still active, Eclipse asks to open the TASKING Pin Mapper perspective.

5. Optionally, enable the option **Remember my decision** and click **Yes**.

The TASKING Pin Mapper perspective is opened.

6. In the Pin Selection pane, select Peripherals » USART1.

7. In the Pin Configuration pane, set the Mode to UART, No Handshake, No Remap.

This selection automatically connects RX to PA10 and TX to PA9. A green check mark - appears if the connection is successful.

🔒 *USART_printf.pincfg 🛛 🦳 🗖				
TASKING Pin Mapper - STM32F103Z(F-G)Tx / LQFP144				
Pin Selection	Pin Configuration			
type filter text 🖉 🕀 🖛			🕺 Use tag: 🛛 ty	/pe new tag 👻
TIM11	Module name:	USART1		
TIM12	USART1 Configuration			
TIM14	Mode:	UART, No Handshake, No Remar 🔻	]	
TIM2	Input/Output		, ,	
TIM4	CK-	None	]	
TIM5	CK.	None	J	
TIM8	CTS:	None		
TIM9	RTS:	None 👻	]	
UART5	RX:	✓ PA10 -	]	
VUSART1	TV.		]	
USART2	DAG	▼ [PA9 ↓	J	<u>_</u>
USART3				
USB Other Bins				
	4			•
				P

- 8. From the File menu, select Save (Ctrl+S) or click 🔚 to save the configuration.
- 9. From the **Pin Mapper** menu, select **Generate Code** or click

The Pin Mapper sources are generated and are added to your project in the folder PinMapper.

10. Return to the TASKING C/C++ perspective.

#### 5.7. Write and Build the Application

Now that the Software Platform sources have been generated we can use it to write an application. In this tutorial we use the USART port on the evaluation board to send a message to the PC. This application uses the library wrapper function  $stm32\_usart\_open$  to configure the USART as specified by the stack item options, which makes it easier to access the USART.

1. From the File menu, select New » Source File.

The New Source File dialog appears.

2. Enter the source file name main.c and click Finish.

The new file main.c is created and ready for editing in the editor view.

3. Add the following C source to the file main.c.

```
#include <stdio.h>
#include "devices.h"
#include "st_stm32_usart.h"
USART_TypeDef * usart = NULL;
int main(void)
{
    /* initialize the USART device using the library wrapper */
   usart = stm32 usart init(ST STM32F10X USART 1);
   printf("Hello world !!!\n");
   return 0;
}
/* use STM32F0XX peripheral access library functions */
int fputc(int ch, FILE *f)
    /* check transmit data register empty flag */
    while (USART GetFlagStatus(usart, USART FLAG TXE) != SET);
    /* send one character */
   USART_SendData(usart, (uint8_t)ch);
   return ch;
}
```

4. From the File menu, select Save (Ctrl+S) or click 🔚.

The file will be saved.

5. From the **Project** menu, select **Build USART\_printf** or click i.

The project is built and a Debug folder is created with the absolute object file USART\_printf.abs.

#### 5.8. Connect the Board

Before you can debug the program you need to connect the STM3210E-EVAL board. The STM3210E-EVAL is an evaluation board for STMicroelectronics ARM Cortex-M3 core-based STM32F103Z microcontrollers. Read the *STM3210E-EVAL evaluation board User Manual (UM0488)* for detailed information about the board.

#### Installing driver software

Before you connect J-Link or ST-LINK to the board, first make sure you have installed the latest driver software. You can download the latest software for J-Link from www.segger.com/download\_jlink.html. You can download the latest software for ST-LINK from:

#### Introduction to the TASKING Software Platform for ARM

http://www.st.com/web/en/catalog/tools/PF258167 (Windows 7, XP),

http://www.st.com/web/en/catalog/tools/PF259459 (Windows 8).

#### **Jumper settings**

Set jumper JP13 to PSU for power through the 5V DC power jack.

#### **Connecting the board**

- 1. Connect any of the J-Link or ST-LINK debugger probes with the 20-pin JTAG/SWD cable to the board.
- 2. Connect J-Link or ST-LINK to a PC with a USB cable.
- 3. Connect port USART1 with a serial cable to a PC.
- 4. Power the board with the 5V DC power adapter connected to the power jack on the board (CN17).

#### 5.9. Debug the Application

We are now ready to use the evaluation board to run and debug the application.

To see the output of the application on your PC you can use a terminal emulator.

1. From the **Debug** menu select **Debug USART\_printf**.

Alternatively you can click the <sup>3</sup>/<sub>2</sub> button in the main toolbar.

The TASKING Debug perspective is associated with the TASKING C/C++ Debugger. Because the TASKING C/C++ perspective is still active, Eclipse asks to open the TASKING Debug perspective.

2. Optionally, enable the option Remember my decision and click Yes.

The debug session is launched. This may take a few seconds. The application suspends when entering the main() function.

USART_printf/main.c - ARM Eclipse IDE	vx.yrz				
File Edit Source Refactor Navigate Search Projec	t Debug Window Help				
: 📬 🕶 🛯 💼 🔚 😥 💣 🕶 🗳 🕶 🗳 🗸	🌾 🖗 🐨 📾 🖗 🗞	• 🔌 🌬 🕹 🕪 🛛	🗏 N 3 🔿 .	e i> 🗟 😿   👪	😕 🔗 🕶 🗾
<u>∲</u> a ▼ ∰ ▼ ∜⊃		Quick Access		TASKING C/C++	🏇 TASKING Debug
🗱 Debug 🛛 🦉 🦓 🚺 🖬 🔻 🗖 🗖	🕬= Variables 🖄 💁 Breakpo	pints	Ittl Registers	8	A - D
USART_printf [TASKING C/C++ Debugger] STMicroelectropics STM3210E-Eval board - STM	2 🍂 E	# ¥ 🔆 🗋 🖆	Group: Cor	e 🔻	
▲ m Thread [ARM] (Suspended)	Name	Value	Name	Value	Usage
1 main() main.c:7 0x08000878			RO	0x0	<u>^</u>
2 Reset_Handler() cstart.c:269 0x08000764			R1	0x0	
			• R2	0x0	
			R3	0x0	
			- R4	0x2000070c	<b>T</b>
< III +	<	•	•		•
🖻 main.c 🛛	)	🗟 Disassembly 🛛	🗄 Outline		)
<pre>#include <stdio.h></stdio.h></pre>	*				
#include "devices.h"		Address:			
#include st_stms2_usart.n	-	<pre>int main(void)</pre>			*
USART_TypeDef * usart = NULL;		{	les the upper d		
		08000878 00 b5	ize the USARI d	<pre>evice using the i {]r}</pre>	library wrapper
<pre> int main(void) { </pre>		usart = st	m32_usart_init(	ST_STM32F10X_USAR	RT_1);
/* initialize the USART device using	the library wrapper				
usart = stm32_usart_init(ST_STM32F10X	_USART_1);	0800087a 00 20	mov	r0, #0x0	(000004-4)
<pre>printf("Hello world !!!\n");</pre>		0800087C TT T7	32 TE DI Idr	stm32_usart_init	(080004e4)
	-	08000882 08 60	str	r0. [r1. #0x0]	-
< III	- F	<			Þ
📮 Console 🛿 🖉 Tasks 🕞 📓	I 🛃 🗳 🕶 🗂 🗖 🗍	🔋 Memory 🛛	📑 🛃 1010 1010 (	հ. նյ 🚮 🔢 😫	
Debug [USART_printf]		Monitors 👍 💥 🖗			
Communication: J-Link over USB (JTAG)	·				
Using Flash Configuration:					
Number of devices : 1					
Device 0:	-				
Address : 0x0000000					
	Writable	Smart Insert 7:1			

3. To resume execution, from the **Debug** menu, select **Resume**, or press **F8**, or click on the **Resume** button (**I**).

The application is executed. When you have a terminal emulator open on your PC, this shows:

Hello world !!!

For more information about debugging an application see Chapter *Debugging your Application* of the *Getting Started with the TASKING VX-toolset*, and Chapter *Using the Debugger* of the *TASKING VX-toolset* for ARM User Guide.

# Chapter 6. Tutorial Creating a Local Repository

In this tutorial we show how to create your own Software Platform repository. This can be useful when you want to create your own plug-ins or to adapt existing plug-ins to suit your needs.

We assume that the Generic\_Filesystem project of Chapter 4, *Tutorial Creating a File System on a RAM Disk* is still present in the C/C++ Projects view.

#### 6.1. Create a Local Repository Project

To use a local repository we need to create a project. This does not have to be a toolset project, because we do not have to compile anything. It is just a container for your local plug-ins. Therefore, it can be a general project.

1. From the File menu, select New » Project

The New Project wizard appears.

2. Select General » Project and click Next.

The Project page appears.

3. Enter a name for your project, for example My\_Repository.

In the Location field you will see the location where the new project will be stored.

4. Click Finish to finish the wizard and to create the project.

The project has now been created and is visible in the C/C++ Projects view.

#### 6.2. Add a Software Platform Plug-in

You can copy existing plug-ins as a starting point, or you can write one from scratch. In this tutorial we make a copy of a plug-in that was generated in the tutorial of Chapter 4, *Tutorial Creating a File System on a RAM Disk*.

1. From the Generic\_Filesystem project, right-click on the ramdisk folder in SoftwarePlatform/platform/generic/drivers and select Copy.

The exact path depends on the directory structure of the Software Platform repository from which the plug-in is retrieved. You can find out the correct path when you click the **Show Resource Info** button (①) in the Properties view of the RAM Disk.



2. Right-click on the My\_Repository project and select New » Folder.

The New Folder dialog appears.

- 3. Select the My\_Repository parent folder if it has not been selected already.
- 4. In the **Folder name** field enter a name to categorize the type of plug-ins. For this tutorial, enter My\_customized\_plugins and click **Finish**.
- 5. Right-click on the My\_customized\_plugins folder and select Paste.

A copy of the ramdisk plug-in is now present in the local repository.

#### 6.3. Modify the Software Platform Plug-in

As long as the name of a plug-in does not change, the new plug-in overrules the plug-in in the default repository. In this tutorial we will only alter the caption (the name of the stack item) of the RAM disk plug-in we just copied.

1. Open the My\_Repository project and open the ramdisk.Plugin file.

▲ → My\_Repository

- My\_customized\_plugins
  - - ▲ ⇒ ini imi imi
      - 👜 ramdisk.bmp
      - 📄 ramdisk.Interface
      - 📄 ramdisk.Plugin

The file ramdisk.Plugin appears in the editor view.

2. Under the [Plugin] part, change the line

Caption=RAM Disk

into

Caption=My RAM Disk

If a question appears that the file is read-only and if you wish to make it writable, click Yes.

3. From the File menu, select Save (Ctrl+S) or click 🔙.

The file will be saved.

#### 6.4. Use the Local Repository

Now that we have a local repository, we want to use it in the Generic\_Filesystem project that we created in Chapter 4, *Tutorial Creating a File System on a RAM Disk*.

You can use Eclipse platform URLs or a file URL to specify the location of a repository or you can use a browse button. The following URLs are supported.

URL	Description
platform:/resource	This URL is used to identify a resource located in the workspace. The next path segment after "resource" should be the name of a project, which can be followed by the folder and/or file we want to locate.
platform:/plugin	This URL is used to locate a resource available in a Eclipse plug-in/bundle. The path segment after "plugin" should be the identifier of the bundle, which can be followed by the path of the resource in the bundle. This URL is used internally for the default Software Platform repository.
file://	This URL is used to specify a local file or directory.

1. In the Generic\_Filesystem project, open the Software Platform document Generic\_Filesystem.swpxmi.

🔚 *Generic_FileSystem.swpxmi 🛛		- 6
A TASKING Software Platform - DE	FAULTCPU Generated code is ou	t-of-date 💽 🖻 🥎
Software Services	Device Stacks	
Software Platform Builder		
POSIX Filesystem Mounting		
POSIX Standard Device I/O		POSIX Storage System
		POSIX_FILESYSTEM_1
		POSIX Standard File I/O (PSE52)
		BLOCKIO_1
	POSIX Debug Terminal	RAM Disk
	DBG_TERMINAL_1	RAMDISK_1

2. Select the Software Platform Builder software service.

The Software Platform Builder Properties view appears.

3. Change the value of Local Repositories to platform:/resource/My\_Repository. Note that this field is case sensitive.

You can enter the URL directly or you can click the 🛄 button to open the Local Repository Locations. Click **Add** to open the Select Location dialog. Click **Workspace** to open the Folder Selection dialog. Select My\_Repository and click **OK** in all dialogs.

🗜 Problems 🗐 Console 🔲 Properties 🛛 🔂 🔂 🛃 🛃 🛃				
Software Platform Builder				
Property	Value	Туре	Range / Prototype	
Device and Toolset Configuration				
Device	DEFAULTCPU			
Architecture	ARMv7M			
Repository Locations				
Local Repositories	platform:/resource/My_Repository/			
Use Default Repository	true			
Software Platform Options				
Enable Asserts	false			
Alternate Output Path				
۲				

An error appears that the Repository cache is out-of-date.

4. From the Software Platform menu, select Reload Repository or click 🐔

As you can see, the RAM Disk stack item has been replaced by My RAM Disk.

寝 *Generic_FileSystem.swpxmi 🛛		- 8
A TASKING Software Platform - DEFAU	JLTCPU Generated code is out	-of-date 💽 🖻 🦣
Software Services	Device Stacks	
Software Platform Builder		
POSIX Filesystem Mounting		
POSIX Standard Device I/O		POSIX Storage System
		POSIX_FILESYSTEM_1
		POSIX Standard File I/O (PSE52)
		BLOCKIO_1
	POSIX Debug Terminal	My RAM Disk
	DBG_TERMINAL_1	RAMDISK_1

If you would generate code again (), the existing plug-in in the generated <code>SoftwarePlatform</code> folder is replaced by the plug-in from <code>My\_Repository</code>. As you can see the <code>My\_customized\_plugins</code> folder has been added to the <code>Generic\_FileSystem</code> project.

▲ Seneric\_FileSystem [Active - Debug] Binaries Includes Debug ▲ ▷→ SoftwarePlatform b > > adaptors Configuration b > > cstart My\_customized\_plugins 🔺 🕞 ramdisk b 🗁 doc include b > > ini b > > services b is main.c Generic\_FileSystem.launch Generic\_FileSystem.lsl Generic\_FileSystem.swpxmi

# Chapter 7. Content of the Default ARM Repositories

The chapter describes the content of the default ARM repositories.

When Altium releases a new version of a repository you can update this repository by using the **Available Updates** wizard.

#### To check for updates

1. From the Help menu, select Check for Updates.

The Available Updates wizard appears.

2. Follow the steps in the wizard and click Finish.

#### **Online repository documentation**

Each repository contains detailed descriptions of its contents. You can access this documentation from the Help menu (Help » Help Contents » Software Platform Repository Reference - ...).

#### 7.1. TASKING POSIX Repository

The Portable Operating System Interface POSIX<sup>®</sup> is a set of well-established standards that define a standardized way for an application to interface to the operating system. Because of the aim of portability and readability we have chosen POSIX as our standard interfaces at application level for at least the kernel (multithreading), device I/O and networking services.

The POSIX standards do not specify how services must be implemented, just their semantics. Implementers can choose their implementation as long as they follow the specification of the interface. These standards have become the de-facto programming standards also for embedded environments.

The complete set of POSIX services as defined in the standard may be useful for large applications, but the set is considered to be too large for most embedded systems. Embedded systems usually have tight memory requirements, may not have memory management capabilities, and may not even have a secondary memory for implementing the UNIX file system.

For these reasons the POSIX standard recognizes the need for the creation of subsets of the operating system services. The IEEE Std 1003.13-2003 edition (POSIX.13) describes four real-time application environment profiles and their minimum hardware requirements.

The TASKING POSIX implementation conforms to the PSE51 profile for Minimal Real-time Systems and supports:

- Multi-threading
- Standard device I/O

#### Introduction to the TASKING Software Platform for ARM

- Standard file I/O (PSE52)
- · Standard device Shared Memory routines
- File system interface for accessing sockets (PSE53)
- · File system interface for accessing shared memory objects
- Basic support for message passing (PSE52)
- · Basic support for signals
- · FAT File System

Some features have limited functionality for devices without peripheral support.

For more information see the TASKING POSIX Implementation.

#### 7.2. STM32 Repository

The STM32 repository contains all STM32 specific content, like peripherals, low-level drivers and library wrappers. Support is included for the following device families:

- STMicroelectronics STM32F0xx
- STMicroelectronics STM32F10x
- STMicroelectronics STM32F2xx
- STMicroelectronics STM32F30x
- STMicroelectronics STM32F37x
- STMicroelectronics STM32F4xx (no FP support)
- STMicroelectronics STM32L1xx

This repository contains software/firmware from STMicroelectronics which is licensed under MCD-ST Liberty SW License Agreement V2. You may not use this package except in compliance with this License. You may obtain a copy of the License at:

http://www.st.com/software\_license\_agreement\_liberty\_v2 (PDF)

#### 7.3. EFM32 Repository

The EFM32 repository contains all Silicon Labs EFM32 specific content, like peripherals, low-level drivers and library wrappers. Support is included for the following device families:

- EFM32 Gecko
- EFM32 Giant Gecko
- EFM32 Leopard Gecko
- EFM32 Tiny Gecko
- EFM32 Wonder Gecko
- EFM32 Zero Gecko

This repository contains software/firmware from Silicon Laboratories which is licensed. See the top of each file for detailed information. Basically you are free to use the Silicon Labs code for any project using Silicon Labs devices.

#### 7.4. Generic Repository

Software services, drivers and peripherals in the generic repository are provided as Bonus Technology as described in the Altium EULA. Some third-party software is included which may require special license agreements. Check the generated code for the exact license usage conditions.

#### **Software services**

The following table contains an overview of the software services present in the generic repository.

Software Service	Description
AES	Generic interface to Advanced Encryption Standard (AES) encryption modules.
Audio Service	Interface to audio controller services.
Bluetooth HID Service	Bluetooth Human Interface Device (HID) class. Interfaces to bluetooth service.
Bluetooth Service	Bluetooth interface.
Ethernet Protocol Services	Service for ethernet peripherals.
GPS-NMEA Services	GPS-NMEA decoder.
Graphics Services	Service for graphics routines, low-level drawing functionality.
GUI Services	The Altium Graphical User Interface (AGUI) contains components you can use to build a User Interface.
HyperText Transfer Protocol	HTTP interface.
Interrupt Management	Interrupt services. Used by interrupt-driven driver software.

Software Service	Description
JPEG Decoder	Basic implementation to decode a JPEG image.
JPEG Encoder	Basic implementation to encode a JPEG image.
JSON Parser	Interface to YAJL's JSON generation facilities.
Location Services	Generic interface to GPS-NMEA or Simcom AT GPS services.
Matrix SSL / TLS	SSL and TLS implementation designed for small footprint applications and devices.
Modem Services	Services to communicate with modems using Hayes AT commands.
Point-to-Point Protocol Services	LWIP PPP service.
Pointer Services	The pointer service keeps the current pointer position up-to-date depending on the input from mouse and/or touchscreen.
Simcom AT GPS Service	GPS receiver.
Software Timing Services	Timing and timer services.
TCP/IP Networking	AutoIP Automatic LinkLocal IP Configuration.
Touchscreen Services	Interface to touchscreen controller services.
USB Host Bluetooth HCI Service	Driver for USB Host Bluetooth HCI.
USB Host Hub Service	Driver for USB Host Hub.
USB Host Keyboard Service	Driver for USB Host Keyboard.
USB Host Mass Storage Service	Driver for USB Host MSD.
USB Host Mouse Service	Driver for USB Host Mouse.
USB Host Service	Generic USB Host service.
USB Host Video Service	Driver for USB Host UVC.
UUID Generator	This module partially implements RFC4122.

#### **Generic drivers**

Generic drivers provide a generic interface to a certain type of peripheral. If the application uses the generic interface, then the hardware specific driver can be changed without the need to modify the application. For example, you can have a generic ADC driver that interfaces with an ADC084S021 ADC driver (SPI).

Driver	Description
802.15.4 LR-WPAN	Generic low-rate wireless PAN driver.
AES Encryption/Decryption	Software implementation of the Advanced Encryption Standard (AES).
External Interrupt	Platform independent generic external interrupt support.
Generic ADC Driver	Generic interface for Analog-to-Digital Converters.

Driver	Description
Generic CAN Driver	Generic interface for Controller Area Networks.
Generic DAC Driver	Generic interface for Digital-to-Analog Converters.
Generic PWM Driver	Generic interface for Pulse-Width Modulation.
Generic RTC Driver	Generic interface for Real Time Clocks.
RAM Disk	Interface for the creation of memory based file systems.

#### **External drivers**

External drivers are drivers for off-chip peripherals. These off-chip peripherals are connected to the chip as an SPI slave device, an I2C slave device, or via some other interface such as GPIO or DMA. In the former two cases an on-chip SPI master peripheral or an on-chip I2C master peripheral is required. For example, the ADC084S021 ADC driver (SPI slave) requires the STM32 SPI driver.

The following tables contain an overview of the external drivers present in the generic repository. Some drivers appear in more than one table, which means that they can have more than one interface.

#### **External drivers - I2C**

Driver	Description
APDS9300 Light Photo Sensor Driver	External driver to turn power on or off of a light photo sensor.
BMP085 Pressure Sensor Driver	External driver to interface with the BMP085 Digital Pressure Sensor.
CS4322 Audio Codec Driver	Interface to I2C control port of CS4322 stereo audio CODEC.
LIS302DL MEMS Motion Sensor	Interface to LIS302DL MEMS motion sensor.
LM75 Temperature Sensor	Interface to STLM75 Digital Temperature Sensor & Thermal Watchdog.
M24Cxx Serial I2C Bus EEPROM Driver	Interface to I2C based M24Cxx serial flash memory device driver
MAX1037 ADC Driver	Interface to the MAX1037 AD converter device driver.
MAX5841 DAC Driver	Interface to the MAX5841 DA converter device driver.
MAX6966 LED Driver	Device driver for MAX6966 (10-Port Constant-Current LED Driver) peripheral.
MCP3021 A/D Converter	Device driver for MCP3021 A/D Converter.
SSD0300 I2C OLED Driver	Driver for SSD0300 OLED display over I2C.
STMPE811 Touchscreen Controller / GPIO Expander	Interface to STMPE811 touchscreen controller / GPIO expander.
TVP5150 Video Decoder Driver	Driver to access configuration registers of a TVP5150 video input decoder device over an I2C bus.

#### **External drivers - SPI**

Driver	Description
ADC084S021 ADC Driver	Four-channel CMOS 8-bit analog-to-digital converter with a high-speed serial interface.
ADC104S021 ADC Driver	Four-channel CMOS 10-bit analog-to-digital converter with a high-speed serial interface.
APDS9300 Light Photo Sensor Driver	External driver to turn power on or off of a light photo sensor.
AT86RF231 Radio Device Driver	Interface to the device driver for AT86RF231 802.15.4 packet radio.
CS4270 Audio Codec Driver	Interface to SPI control port of CS4270 stereo audio CODEC.
DAC084S085 DAC Driver	Interface to the DAC084S085 DA converter device driver.
DAC104S085 DAC Driver	Interface to the DAC104S085 DA converter device driver.
DS1391 Real Time Clock Driver	Device driver for DS1391 (Real Time Clock) peripheral.
ENC28J60 Driver	Interface to ENC28J60 ethernet controller device driver.
ICS307 Clock Generator Driver	External driver for ICS307-02 serially programmable clock source.
ILI9320 LCD Module Driver (SPI)	Device driver for an ILI9320 based LCD that is connected through SPI.
ILI9341 LCD Module Driver	Device driver for the ILI9341 Display Controller.
M25Px0 Serial Flash Memory Driver	Interface to SPI based M25Px0 serial flash memory device driver.
MAX1104 Audio Codec Driver	The MAX1104 CODEC provides both an 8-bit analog-to-digital converter (ADC) and an 8-bit digital-to-analog converter (DAC).
MAX1229 12x12 ADC Driver	Device driver for MAX1229 (Real Time Clock) peripheral.
PCF2123 Real Time Clock Driver	Device driver for PCF2123 (Real Time Clock) peripheral.
SD Card Reader Driver	Driver to access SD card readers through an SPI controller.
SPFD5408 LCD Module Driver (SPI)	Device driver for SPFD5408 based LCDs through SPI connections.
SSD1329 SPI OLED Driver	Driver for SSD1329 OLED display over SPI.

#### **External drivers - other**

Driver	Description
APDS9700 Proximity Sensor Driver	External driver to interface with a proximity sensor.
AT86RF231 Radio Device Driver	Interface to the device driver for AT86RF231 802.15.4 packet radio.
DWC USB OTG Driver	DesignWare Core portability library, low-level OS wrapper functions.

Driver	Description
HIH5030 Humidity Sensor Driver	External driver to interface with a humidity sensor.
ILI9320 LCD Module Driver (parallel)	Device driver for an ILI9320 based LCD that is connected to the parallel interface.
ILI9341 LCD Module Driver	Device driver for the ILI9341 Display Controller.
M25Px0 Flash Memory Block I/O	Interface to M25Px0 parallel flash memory device driver.
SPFD5408 LCD Module Driver (parallel)	Device driver for SPFD5408 based LCDs through parallel connections.
SSD1329 SPI OLED Driver	Driver for SSD1329 OLED display over SPI.
ST7637_PAR LCD Driver	Driver for ST7637 LCD display with parallel interface.

## **Chapter 8. Glossary**

The following terminology is used to describe the TASKING Software Platform concepts (in alphabetical order).

#### **Software Platform**

The source code generated by the Software Platform Builder. The source code becomes part of your project. A graphical representation of the Software Platform is present in the Software Platform Builder.

#### **Software Platform Builder**

The graphical editor where you can edit a Software Platform document and where you can generate the source code for your Software Platform. The editor shows a graphical representation of your Software Platform.

#### **Software Platform document**

A file with extension . swpxmi which is part of your project. It contains the configuration of your Software Platform and is managed by the Software Platform Builder.

#### Software Platform plug-in or module

Software Platform definition files, source code and other resources. Plug-ins are bundled in a Software Platform repository.

#### Software Platform repository

The collection of Software Platform plug-ins. It provides the contents for a generated Software Platform.

#### **TASKING Software Platform**

The main software framework delivered by Altium, consisting of Software Platform repositories and the Software Platform Builder.