

TASKING[®]

***TASKING TriCore v6.2r2
Inspector User Guide***

Copyright © 2021 TASKING BV.

All rights reserved. You are permitted to print this document provided that (1) the use of such is for personal use only and will not be copied or posted on any network computer or broadcast in any media, and (2) no modifications of the document is made. Unauthorized duplication, in whole or part, of this document by any means, mechanical or electronic, including translation into another language, except for brief excerpts in published reviews, is prohibited without the express written permission of TASKING BV. Unauthorized duplication of this work may also be prohibited by local statute. Violators may be subject to both criminal and civil penalties, including fines and/or imprisonment. TASKING® and its logo are registered trademarks of TASKING Germany GmbH. All other registered or unregistered trademarks referenced herein are the property of their respective owners and no trademark rights to the same are claimed.

Table of Contents

Manual Purpose and Structure	v
1. Installing the Software	1
1.1. Installation for Windows	1
1.2. Licensing	1
1.2.1. Obtaining a License	3
1.2.2. Frequently Asked Questions (FAQ)	3
1.2.3. Installing a License	3
2. Introduction to the TASKING Inspector	9
2.1. Product Overview	9
3. Using the Inspector	11
3.1. Detectors for Known Issues	11
3.2. Detecting Issues with the Inspector Tools	11
3.3. Detection Processing of More Complex Issues	12
3.3.1. Issue Detector for TCVX-43102	12
3.3.2. Issue Detector for TCVX-43309	12
3.3.3. Issue Detector for TCVX-43543	13
3.3.4. Issue Detector for TCVX-43704	13
3.3.5. Issue Detector for TCVX-43893	14
3.3.6. Issue Detector for TCVX-43928	14
3.3.7. Issue Detector for TCVX-43998	14
3.3.8. Issue Detector for TCVX-44102	15
3.3.9. Issue Detector for TCVX-44237	15
3.3.10. Issue Detector for TCVX-44387	15
3.3.11. Issue Detector for TCVX-44400	16
3.3.12. Issue Detector for TCVX-44407	16
4. Tool Options	17
4.1. Control Program Options	17
4.2. C++ Compiler Options	22
4.3. C Compiler Options	26
4.4. Assembler Options	31
4.5. Linker Options	35

Manual Purpose and Structure

Manual Purpose

You should read this manual if you want to know:

- how to use the TASKING TriCore v6.2r2 Inspector
- the features of the TASKING TriCore v6.2r2 Inspector

Manual Structure

Chapter 1, *Installing the Software*

Explains how to install and license the TASKING TriCore v6.2r2 Inspector.

Chapter 2, *Introduction to the TASKING Inspector*

Contains an introduction to the TASKING TriCore v6.2r2 Inspector and contains an overview of the features.

Chapter 3, *Using the Inspector*

Explains how to use the TASKING TriCore v6.2r2 Inspector.

Chapter 4, *Tool Options*

Contains an overview of all the Inspector specific options of the tools.

Related Publications

- Getting Started with the TASKING VX-toolset for TriCore
- TASKING VX-toolset for TriCore User Guide
- TriCore 1 32-bit Unified Processor Core, Volume 1 Core Architecture, V1.3 & V1.3.1 Architecture User's Manual, V1.3.8 [2007-11, Infineon]
- TriCore 1 32-bit Unified Processor Core, Volume 2 Instruction Set, V1.3 & V1.3.1 Architecture User's Manual, V1.3.8 [2007-11, Infineon] • TC1xxx User's Manual, V2.0 [2007, Infineon]
- TriCore 1 32-bit Unified Processor Core, Embedded Applications Binary Interface (EABI), V1.3, V1.3.1 & V1.6 Architecture User's Manual, v2.5 [2008-01, Infineon]
- AURIX™ TC21x/TC22x/TC23x Family User's Manual, V1.1 [2014-12, Infineon]
- AURIX™ TC26x A-Step User's Manual, V1.1 [2013-12, Infineon]
- AURIX™ TC26x B-Step User's Manual, V1.2 [2014-02, Infineon]
- AURIX™ TC27x User's Manual, V1.4 [2013-11, Infineon]

TASKING TriCore v6.2r2 Inspector User Guide

- AURIX™ TC27x B-Step User's Manual, V1.4.1 [2014-02, Infineon]
- AURIX™ TC27x C-Step User's Manual, V2.2 [2014-12, Infineon]
- AURIX™ TC27x D-Step User's Manual, V2.2 [2014-12, Infineon]
- AURIX™ TC29x A-Step User's Manual, V1.1.1 [2014-01, Infineon]
- AURIX™ TC29x B-Step User's Manual, V1.3 [2014-12, Infineon]
- AURIX™ TC3xx Target Specification, V2.4 [2017-10, Infineon]
- AURIX™ TC3xx User's Manual, V1.4.0 [2019-12, Infineon]
- AURIX™ TC35x User's Manual Appendix, V1.5.0 [2020-04, Infineon]
- AURIX™ TC37x User's Manual Appendix, V1.5.0 [2020-04, Infineon]
- AURIX™ TC38x User's Manual Appendix, V1.5.0 [2020-04, Infineon]
- AURIX™ TC39x-B User's Manual Appendix, V1.5.0 [2020-04, Infineon]

Chapter 1. Installing the Software

This chapter guides you through the installation process of the TASKING® TriCore v6.2r2 Inspector. It also describes how to license the software.

In this manual, **TASKING TriCore v6.2r2 Inspector** and **Inspector** are used as synonyms.

1.1. Installation for Windows

System Requirements

Before installing, make sure the following minimum system requirements are met:

- Windows 7 or higher
- 2 GHz Pentium class processor
- 4 GB memory
- 500 MB free hard disk space

Installation

1. If you received a download link, download the software and extract its contents.

- or -

If you received an USB flash drive, insert it into a free USB port on your computer.

2. Run the installation program (**setup.exe**).

The TASKING Setup dialog box appears.

3. Select a product and click on the **Install** button. If there is only one product, you can directly click on the **Install** button.
4. Follow the instructions that appear on your screen. During the installation you need to enter a license key, this is described in [Section 1.2, Licensing](#).

1.2. Licensing

TASKING products are protected with TASKING license management software (TLM). To use a TASKING product, you must install that product and install a license.

The following license types can be ordered from TASKING.

Node-locked license

A node-locked license locks the software to one specific computer so you can use the product on that particular computer only.

For information about installing a node-locked license see [Section 1.2.3.2, *Installing Server Based Licenses \(Floating or Node-Locked\)*](#) and [Section 1.2.3.3, *Installing Client Based Licenses \(Node-Locked\)*](#).

Floating license

A floating license is a license located on a license server and can be used by multiple users on the network. Floating licenses allow you to share licenses among a group of users up to the number of users (seats) specified in the license.

For example, suppose 50 developers may use a client but only ten clients are running at any given time. In this scenario, you only require a ten seats floating license. When all ten licenses are in use, no other client instance can be used. Also a linger time is in place. This means that a license seat is locked for a period of time after a user has stopped using a client. The license seat is available again for other users when the linger time has finished.

For information about installing a floating license see [Section 1.2.3.2, *Installing Server Based Licenses \(Floating or Node-Locked\)*](#).

License service types

The license service type specifies the process used to validate the license. The following types are possible:

- **Client based** (also known as 'standalone'). The license is serviced by the client. All information necessary to service the license is available on the computer that executes the TASKING product. This license service type is available for node-locked licenses only.
- **Server based** (also known as 'network based'). The license is serviced by a separate license server program that runs either on your companies' network or runs in the cloud. This license service type is available for both node-locked licenses and floating licenses.

Licenses can be serviced by a cloud based license server called "**Remote TASKING License Server**". This is a license server that is operated by TASKING. Alternatively, you can install a license server program on your local network. Such a server is called a "**Local TASKING License Server**". You have to configure such a license server yourself. The installation of a local TASKING license server is not part of this manual. You can order it as a separate product (SW000089).

The benefit of using the Remote TASKING License Server is that product installation and configuration is simplified.

Unless you have an IT department that is proficient with the setup and configuration of licensing systems we recommend to use the facilities offered by the Remote TASKING License Server.

1.2.1. Obtaining a License

You need a license key when you install a TASKING product on a computer. If you have not received such a license key follow the steps below to obtain one. Otherwise, you cannot install the software.

Obtaining a server based license (floating or node-locked)

- Order a TASKING product from TASKING or one of its distributors.

A license key will be sent to you by email or on paper.

If your node-locked server based license is not yet bound to a specific computer ID, the license server binds the license to the computer that first uses the license.

Obtaining a client based license (node-locked)

To use a TASKING product on one particular computer with a license file, TASKING needs to know the computer ID that uniquely identifies your computer. You can do this with the **getcid** program that is available on the TASKING website. The detailed steps are explained below.

1. Download the **getcid** program from <http://www.tasking.com/support/tlm/downloads>.
2. Execute the **getcid** program on the computer on which you want to use a TASKING product. The tool has no options. For example,

```
C:\Tasking\getcid_version  
Computer ID: 5Dzm-L9+Z-WFbO-aMkU-5Dzm-L9+Z-WFbO-aMkU-MDAy-Y2Zm
```

The computer ID is displayed on your screen.

3. Order a TASKING product from TASKING or one of its distributors and supply the computer ID.

A license key and a license file will be sent to you by email or on paper.

When you have received your TASKING product, you are now ready to install it.

1.2.2. Frequently Asked Questions (FAQ)

If you have questions or encounter problems you can check the support page on the TASKING website.

<http://www.tasking.com/support/tlm/faqs>

This page contains answers to questions for the TASKING license management system TLM.

If your question is not there, please contact your nearest TASKING Sales & Support Center or Value Added Reseller.

1.2.3. Installing a License

The license setup procedure is done by the installation program.

TASKING TriCore v6.2r2 Inspector User Guide

If the installation program can access the internet then you only need the licence key. Given the license key the installation program retrieves all required information from the remote TASKING license server. The install program sends the license key and the computer ID of the computer on which the installation program is running to the remote TASKING license server, no other data is transmitted.

If the installation program cannot access the internet the installation program asks you to enter the required information by hand. If you install a node-locked client based license you should have the license file at hand (see [Section 1.2.1, Obtaining a License](#)).

Floating licenses are always server based and node-locked licenses can be server based. All server based licenses are installed using the same procedure.

1.2.3.1. Configure the Firewall in your Network


For using the TASKING license servers the TASKING license manager tries to connect to the Remote TASKING servers `lic1.tasking.com`, `lic2.tasking.com`, `lic3.tasking.com`, `lic4.tasking.com` at the TCP ports 8080, 8936 or 80. Make sure that the firewall in your network is transparently enabled for one of these ports.

1.2.3.2. Installing Server Based Licenses (Floating or Node-Locked)

If you do not have received your license key, read [Section 1.2.1, Obtaining a License](#) before you continue.

1. If you want to use a local license server, first install and run the local license server before you continue with step 2. You can order a local license server as a separate product (SW000089).
2. Install the TASKING product and follow the instructions that appear on your screen.

The installation program asks you to enter the license information.

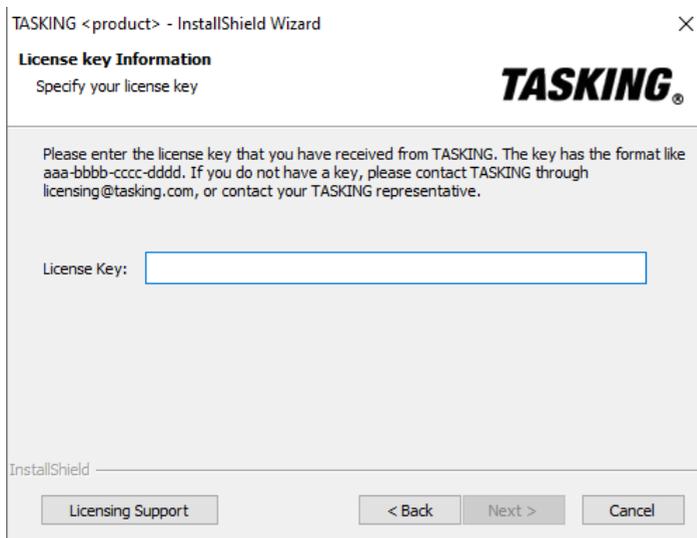

The screenshot shows a dialog box titled "TASKING <product> - InstallShield Wizard". The main heading is "License key Information" with the instruction "Specify your license key". The TASKING logo is displayed in the top right. Below, a text box provides instructions: "Please enter the license key that you have received from TASKING. The key has the format like aaa-bbbb-cccc-dddd. If you do not have a key, please contact TASKING through licensing@tasking.com, or contact your TASKING representative." A text input field labeled "License Key:" is provided. At the bottom, there are buttons for "Licensing Support", "< Back", "Next >", and "Cancel".

3. In the **License Key** field enter the license key you have received from TASKING and click **Next** to continue.

The installation program tries to retrieve the license information from a remote TASKING license server. Wait until the license information is retrieved. If the license information is retrieved successfully subsequent dialogs are already filled-in and you only have to confirm the contents of the dialogs by clicking the **Next** button. If the license information is not retrieved successfully you have to enter the information by hand.

4. Select your **License Type** and click **Next** to continue. If the license type is already filled in and grayed out, you can just click **Next** to continue.

You can find the license type in the email or paper that contains the license key.

5. (For floating licenses only) Select **Remote TASKING license server** to use one of the remote TASKING license servers, or select **Local TASKING license server** for a local license server. The latter requires optional software.

(For local license server only) specify the **Server name** and **Server port** of the local license server.

Note that a Node-locked server based license always uses the Remote TASKING license server.


6. Click **Next** and follow the rest of the instructions to complete the installation.

1.2.3.3. Installing Client Based Licenses (Node-Locked)

If you do not have received your license key and license file, read [Section 1.2.1, Obtaining a License](#) before continuing.

1. Install the TASKING product and follow the instructions that appear on your screen.


The installation program asks you to enter the license information.

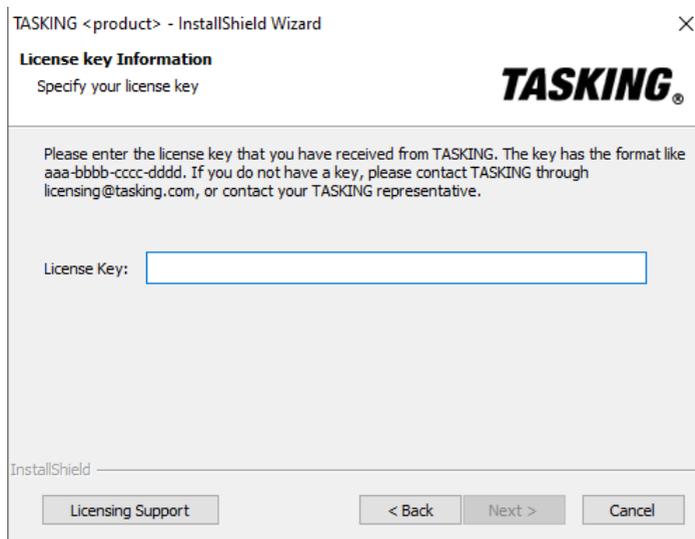


The screenshot shows a dialog box titled "TASKING <product> - InstallShield Wizard". The main heading is "License key Information" with the instruction "Specify your license key". The TASKING logo is displayed in the top right. Below the heading, there is a text block: "Please enter the license key that you have received from TASKING. The key has the format like aaa-bbbb-cccc-dddd. If you do not have a key, please contact TASKING through licensing@tasking.com, or contact your TASKING representative." A text input field labeled "License Key:" is provided for the user to enter the key. At the bottom of the dialog, there are four buttons: "Licensing Support", "< Back", "Next >", and "Cancel".

2. In the **License Key** field enter the license key you have received from TASKING and click **Next** to continue.

The installation program tries to retrieve the license information from a remote TASKING license server. Wait until the license information is retrieved. If the license information is retrieved successfully subsequent dialogs are already filled-in and you only have to confirm the contents of the dialogs by clicking the **Next** button. If the license information is not retrieved successfully you have to enter the information by hand.

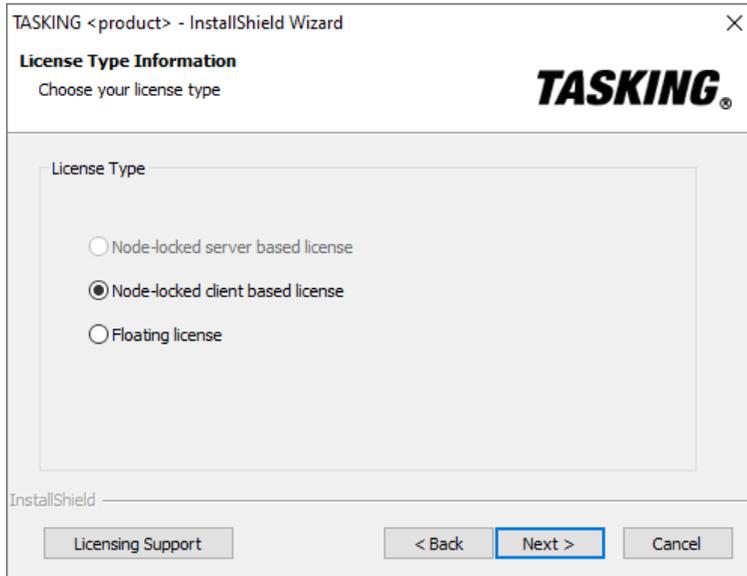

3. Select **Node-locked client based license** and click **Next** to continue.

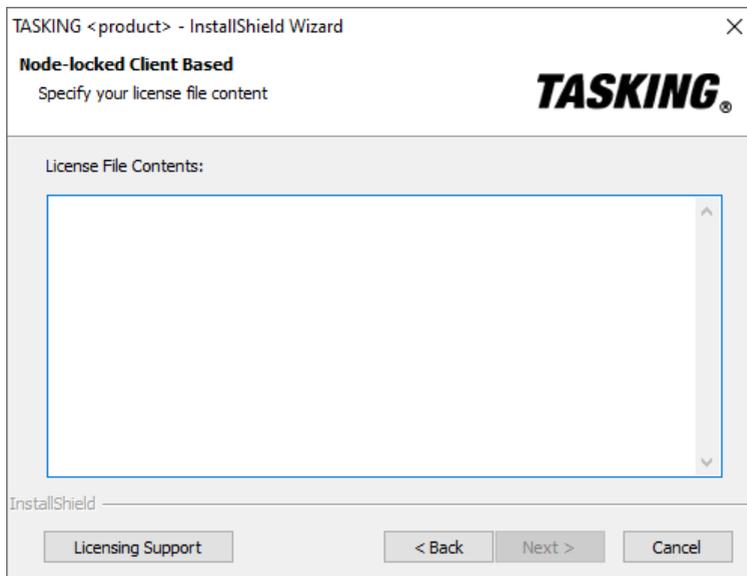

4. In the **License File Contents** field enter the contents of the license file you have received from TASKING.

The license data is stored in the file licfile.txt in the etc directory of the product (<install_dir>\etc).

5. Click **Next** and follow the rest of the instructions to complete the installation.

Chapter 2. Introduction to the TASKING Inspector

The TASKING TriCore v6.2r2 Inspector is a product which allows you to ascertain whether compilation of your code is affected by known issues in various components of the TASKING VX-toolset for TriCore v6.2r2 as presented on the TASKING Issue Portal. Essentially, the Inspector is a copy of the TriCore v6.2r2 toolset that does not produce any executable code.

The TASKING Inspector is a useful tool to determine if you need a patch for the TASKING VX-toolset for TriCore v6.2r2 or not. Depending on the status of your project a patch can be applied easily or an extensive retest and re-qualification of the complete project is required. Without an Inspector tool it is necessary to go through the complete project source code by hand or write complex search scripts. Even with such complex scripts it is not possible to determine correctly if the code is impacted or not. The Inspector tool is setup in a way that it does not require any complex search scripts or hand review of the customer software. Only when an issue is detected you need to review the affected source code and/or generated assembly code. Defined by the usage of the Inspector it is guaranteed that each software component for a particular project is checked and the probability of failures is reduced a lot.

Issue detectors

Minimally required snippets of code called 'detectors' are inserted into the original tools, which can detect the fact that the currently compiled code will be affected by a certain known issue and then the detectors report that fact.

Some detectors cannot determine such fact with 100% certainty. Such detectors report that your code is potentially affected by the certain known issue and it's up to you to verify that.

By default all existing detectors are enabled within the Inspector and there are options that allow you to enable and disable particular detectors.

Features of the TASKING Inspector

- Detect known issues in your source code that definitely impact the tool output (no false positives)
- Detect known issues in your source code that potentially impact the tool output (false positive is possible)
- Clarify detection of a certain issue by comparing the assembly source files affected and not affected by that issue after its potential occurrence has been detected.
- Produce diagnostic messages

2.1. Product Overview

The TASKING Inspector has all the same command-line tools as the TASKING VX-toolset for TriCore v6.2r2. The Eclipse IDE and debugger are not part of the TASKING Inspector. The linker cannot produce any executable code.

TASKING TriCore v6.2r2 Inspector User Guide

The following tools have Inspector capabilities. They are equivalent to the original tools without the "insp_" prefix, and contain additional options.

- Control Program: **insp_cctc**
- C++ Compiler: **insp_cptc**
- C Compiler: **insp_ctc**
- Assembler: **insp_astc**
- Linker: **insp_ltc**

For information about the individual tools, see the corresponding tools in the *TASKING VX-toolset for TriCore v6.2r2 User Guide*.

This manual only describes the additional functionality and options.

Chapter 3. Using the Inspector

This chapter describes how to use the Inspector tools.

The TASKING TriCore v6.2r2 Inspector tools work the same as the individual tools of the TASKING VX-toolset for TriCore v6.2r2. You can invoke the tools using the control program **insp_cctc**, or you can invoke the C++ compiler (**insp_cptc**), C compiler (**insp_ctc**), assembler (**insp_astc**) and linker (**insp_ltc**) individually.

3.1. Detectors for Known Issues

Depending on the tools the Inspector can detect several known issues. For the list of issues you can detect, see the release notes of the TASKING TriCore v6.2r2 Inspector. For details about the issue, you can inspect the corresponding issues on the TASKING Issues Portal <https://issues.tasking.com/?project=TCVX&version=v6.2r2>.

3.2. Detecting Issues with the Inspector Tools

You can invoke the Inspector by calling the control program, or by calling the tools individually. The invocations are similar. As an example we use the control program.

Invocation syntax on the command line

```
insp_cctc [ [option]... [file]... ]...
```

By default all existing detectors are enabled within the Inspector and there are options that allow you to enable and disable particular detectors.

You can find a detailed description of all Inspector specific tool options in [Chapter 4, Tool Options](#).

Detect/ignore issue detectors

With the options **--detect** and **--ignore** you can make a selection of the issue detectors. These options are the same for all Inspector tools.

Detect by means of assembly compare

For some issue detectors where the normal detection gives a potential occurrence of an issue, you can run an extra detector with option **--detect-asm**. This option is only available for the C compiler and by means of the control program and can only detect one issue at a time. With this option the Inspector tool clarifies detection of a certain issue by comparing the assembly source files affected and not affected by that issue after its potential occurrence has been detected.

Detection messages

The following messages can be generated by an Inspector tool:

TASKING TriCore v6.2r2 Inspector User Guide

```
[INSP] detected occurrence of issue id
```

for issues that definitely impact the tool output (no false positives possible).

```
[INSP] detected potential occurrence of issue id
```

for issues that potentially impact the tool output (false positives are possible).

When an assembly difference is detected the following messages can be generated:

```
[INSP] detected change in assembly listing for command: argv  
[INSP] asm cmp: assembly listing copies created for analysis.  
        original: asm1 fixed: asm2
```

where, *argv* is the tool invocation line and *asm1* and *asm2* are the names of the two differing assembly outputs.

Example

To detect if the C compiler issues TCVX-43102 and TCVX-43309 are present and ignore the other detectors, type:

```
insp_cctc --detect=TCVX-43102,TCVX-43309 test.c
```

3.3. Detection Processing of More Complex Issues

The following sections give guidance on how to process more complex and not always obvious issues that the Inspector can detect.

3.3.1. Issue Detector for TCVX-43102

Issue Description

Optimization of struct return may lead to overlapping struct copy.

Detection Processing

This issue is detected when the compiler optimizes return of a struct from a function and ignores potential overlap between the source and the destination. Such overlap may only occur with union containing struct members.

Verify that there is no such overlap possible at the indicated source position. Note that inlining of such a function may lead to it being optimized into a direct assignment.

3.3.2. Issue Detector for TCVX-43309

Issue Description

Compiler reorders memory accesses to potentially aliasing locations.

Detection Processing

This issue is reported when the compiler misses potential memory aliasing/overlapping and assumes that memory access (store or function call) indicated by the source position is safe to optimize.

The issue is reported when the compiler reorders potentially aliasing memory accesses indicated by the first and the second source position.

Verify that the corresponding memory is not aliased and reordering of such instructions cannot change program behavior.

You can use [control program option](#) `--detect-asm=TCVX-43309` for further assistance. The difference in the generated assembly code indicates potentially problematic instructions. Absence of such a difference means that detection is a false positive.

3.3.3. Issue Detector for TCVX-43543

Issue Description

Sizeof operator applied to a VLA involving variable post-modification causes wrong code.

Detection Processing

This issue is reported when the compiler ignores post-increment/post-decrement operations in the context of sizeof.

Verify that the indicated value's modification does not affect program behavior (e.g. the value is not used afterwards).

You can use [control program option](#) `--detect-asm=TCVX-43543` for further assistance. The difference in the generated assembly code indicates potentially problematic instructions. Absence of such a difference means that detection is a false positive.

3.3.4. Issue Detector for TCVX-43704

Issue Description

Non justified if condition optimization.

Detection Processing

This issue is reported when the compiler removes the single-statement body of an if-statement (indicated by the source position) with a possible side-effect in condition.

Verify that evaluation of the condition does not invalidate removal of the if-statement body.

3.3.5. Issue Detector for TCVX-43893

Issue Description

C compiler omits value assignment to pointer type function argument with forward store optimization enabled.

Detection Processing

This issue is reported when the compiler misses potential memory aliasing/overlapping and assumes that memory access (store or function call) indicated by the source position is safe to optimize.

Verify that the indicated memory accesses do not overlap with each other and are not incorrectly optimized away.

You can use [control program option --detect-asm=TCVX-43893](#) for further assistance. The difference in the generated assembly code indicates potentially problematic instructions. Absence of such a difference means that detection is a false positive.

Note that mitigations listed for this issue may still produce false positive detections.

3.3.6. Issue Detector for TCVX-43928

Issue Description

Incorrect reordering of volatile memory reads.

Detection Processing

This issue is reported when the compiler incorrectly reorders volatile memory accesses, indicated by the source positions.

Verify that these memory accesses are not interdependent and that the new order does not change program behavior.

3.3.7. Issue Detector for TCVX-43998

Issue Description

Invalid constant propagation with triple indirection.

Detection Processing

This issue is detected when the compiler overlooks potential memory overlap/aliasing for multiple-indirection memory access indicated by a source position. This may result in various optimizations being applied incorrectly and changing program behavior in unsafe way.

Verify that the indicated indirect memory access is safe and any optimizations applied to it do not change program behavior.

You can use [control program option --detect-asm=TCVX-43998](#) for further assistance. The difference in the generated assembly code indicates potentially problematic instructions. Absence of such a difference means that detection is a false positive.

3.3.8. Issue Detector for TCVX-44102

Issue Description

Loop invariant code optimization issue.

Detection Processing

This issue is reported during loop-invariant code motion, when an indirect memory access (indicated by the source position) is moved out of the loop and there is a possibility that the corresponding pointer may be uninitialized or incorrectly initialized at its new location.

Verify that the indicated indirect memory access may be correctly and unconditionally dereferenced outside of the containing loop.

3.3.9. Issue Detector for TCVX-44237

Issue Description

Illegal double word access to SFR register range.

Detection Processing

This issue is detected when the compiler removes a volatile modifier from the variable or ignores this modifier during a peephole optimization. A lost volatile modifier may also affect subsequent optimizations.

Verify that accesses to the indicated volatile variable are not incorrectly optimized and remain in order with other volatile accesses.

You can use [control program option --detect-asm=TCVX-444237](#) for further assistance. The difference in the generated assembly code indicates potentially unsafe optimizations/reorderings. Absence of such a difference means that detection is a false positive.

3.3.10. Issue Detector for TCVX-44387

Issue Description

Erroneous code in code compaction function leads to invalid function parameter.

Detection Processing

This issue is reported when the compiler reorders instructions in a potentially unsafe way. It can only affect functions named `.cocompfun_*` generated by the code compaction optimization. The source position in the message indicates the first instruction of the corresponding function. These functions are usually small in size.

Verify that the order of the instructions in the indicated function does not break data dependency.

You can use [control program option --detect-asm=TCVX-44387](#) for further assistance. The difference in the generated assembly code indicates which instructions have been reordered and should be looked at.

3.3.11. Issue Detector for TCVX-44400

Issue Description

Wrong value is loaded into a 48-bit struct if used as a member of a larger 64-bit struct.

Detection Processing

The Inspector issues a warning every time an incorrect pattern is used. Whether it leads to an actual bug depends on previous initializations and sometimes run-time. An incorrect pattern is only used when a 40-bit or 48-bit structure is assigned as a member of a 64-bit structure with a non-zero offset and this operation is performed on extended registers. The generated code can produce invalid results if other members of the 64-bit (destination) structure have been initialized with non-zero value prior to the assignment in question. If at the moment of the assignment in question other members of the 64-bit structure are uninitialized or initialized with zero, the final result will be correct. Thus one possible mitigation would be to change the order of assignments.

3.3.12. Issue Detector for TCVX-44407

Issue Description

C compiler front-end may produce imprecise FP result (± 1 bit difference).

Detection Processing

This issue is detected during the constant folding when the result of the division of a floating-point constant by another constant deviates from the expected value in digits beyond the corresponding type precision. Whether this will affect the resulting constant in the assembly code depends on the whole constant expression being folded. This deviation may affect rounding, leading to the incorrect result of the division itself. It may also be accumulated or amplified by subsequent operations, affecting the result of the whole expression. On the other hand, subsequent operations (e.g. another division or cast to a smaller precision) may negate this deviation. The source position indicates the operation in question, when it is possible.

Verify that the value of the folded constant expression in the assembly code is correct.

You can use [control program option --detect-asm=TCVX-44407](#) for further assistance. The difference in the generated assembly code indicates incorrectly folded constants. Absence of such a difference means that detection is a false positive.

The mitigation listed in the issue does not work for unnamed constants, but this can be amended by naming them.

Chapter 4. Tool Options

This chapter provides a detailed description of the Inspector specific options for the control program, C++ compiler, C compiler, assembler and linker.

4.1. Control Program Options

The control program **insp_cctc** facilitates the invocation of the various components of the Inspector from a single command line.

This section lists all control program options that are specific to the Inspector. All other options are the same as the control program of the TriCore VX-toolset for TriCore v6.2r2.

The control program processes command line options either by itself, or, when the option is unknown to the control program, it looks whether it can pass the option to one of the other tools. However, for directly passing an option to the C++ compiler, C compiler, assembler or linker, it is recommended to use the control program options **--pass-c++**, **--pass-c**, **--pass-assembler**, **--pass-linker**.

See the other sections for details on the options of the tools.

When you do not specify an option, a default value may become active.

Control program option: **--detect**

Command line syntax

```
--detect=issue,...
```

Description

This option allows you to enable only a specific set of issue detectors for Inspector. Detectors not listed in this option will be disabled. This option is mutually exclusive with control program options **--detect-asm** and **--ignore**.

For the list of issues you can detect, see the release notes of the TASKING TriCore v6.2r2 Inspector. When you specify a wrong issue, the list of issues is also listed on the command line.

Example

To detect if the C compiler issue TCVX-43102 is present, type:

```
insp_cctc --detect=TCVX-43102 test.c
```

Related information

Control program option **--detect-asm** (Enable assembler comparison issue detector)

Control program option **--ignore** (Disable issue detectors)

Control program option: **--detect-asm**

Command line syntax

```
--detect-asm=issue
```

Description

With this option the Inspector tool clarifies detection of a certain issue by comparing the assembly source files affected and not affected by that issue after its potential occurrence has been detected. It can only detect one issue at a time. All other detectors will be disabled. This option is mutually exclusive with control program options **--detect** and **--ignore**.

For the list of issues you can detect, see the release notes of the TASKING TriCore v6.2r2 Inspector. When you specify a wrong issue, the list of issues is also listed on the command line.

Example

To detect if the C compiler issue TCVX-43309 is present by comparing the assembly output, type:

```
insp_cctc --detect-asm=TCVX-43309 test.c
```

Related information

Control program option **--detect** (Enable issue detectors)

Control program option **--ignore** (Disable issue detectors)

Control program option: **--ignore**

Command line syntax

```
--ignore=issue,...
```

Description

This option allows you to disable a specific set of issue detectors for Inspector. Detectors not listed in this option will be enabled. This option is mutually exclusive with control program options **--detect** and **--detect-asm**.

For the list of issues you can specify, see the release notes of the TASKING TriCore v6.2r2 Inspector. When you specify a wrong issue, the list of issues is also listed on the command line.

Example

To ignore the issue detector for C compiler issue TCVX-43102 and enable all other issue detectors, type:

```
insp_cctc --ignore=TCVX-43102 test.c
```

Related information

Control program option **--detect** (Enable issue detectors)

Control program option **--detect-asm** (Enable assembler comparison issue detector)

Control program option: --insp-log

Command line syntax

```
--insp-log=file
```

Description

With this option the control program will add options to the tools to redirect Inspector messages to the specified file. This file is written in append mode, clearing it is the user's responsibility.

Each detection warning is prefixed with the tool's invocation line. The control program passes this option to the C++ compiler, C compiler, assembler and linker.

Example

```
insp_cctc --detect=TCVX-43102 --insp-log=TCVX-43102.log test.c
```

The log file `TCVX-43102.log` will contain the Inspector messages.

Related information

-

4.2. C++ Compiler Options

This section lists all C++ compiler options that are specific to the Inspector. All other options are the same as the C++ compiler of the TriCore VX-toolset for TriCore v6.2r2.

When you do not specify an option, a default value may become active.

The priority of the options is left-to-right: when two options conflict, the first (most left) one takes effect. The **-D** and **-U** options are not considered conflicting options, so they are processed left-to-right for each source file. You can overrule the default output file name with the **--output-file** option.

C++ compiler option: `--detect`

Command line syntax

```
--detect=issue,...
```

Description

This option allows you to enable only a specific set of issue detectors for Inspector. Detectors not listed in this option will be disabled. This option is mutually exclusive with [C++ compiler option `--ignore`](#).

For the list of issues you can detect, see the release notes of the TASKING TriCore v6.2r2 Inspector. When you specify a wrong issue, the list of issues is also listed on the command line.

Example

To detect if the C++ compiler issue `TCVX-43239` is present, type:

```
insp_cptc --detect=TCVX-43239 test.cc
```

Related information

[C++ compiler option `--ignore`](#) (Disable issue detectors)

C++ compiler option: `--ignore`

Command line syntax

```
--ignore=issue,...
```

Description

This option allows you to disable a specific set of issue detectors for Inspector. Detectors not listed in this option will be enabled. This option is mutually exclusive with [C++ compiler option `--detect`](#).

For the list of issues you can specify, see the release notes of the TASKING TriCore v6.2r2 Inspector. When you specify a wrong issue, the list of issues is also listed on the command line.

Example

To ignore the issue detector for C++ compiler issue `TCVX-43239` and enable all other issue detectors, type:

```
insp_cptc --ignore=TCVX-43239 test.cc
```

Related information

[C++ compiler option `--detect`](#) (Enable issue detectors)

C++ compiler option: `--insp-log`

Command line syntax

```
--insp-log=file
```

Description

With this option the C++ compiler duplicates Inspector detection messages to the specified file. This file is written in append mode, clearing it is the user's responsibility.

Each detection warning is prefixed with the tool's invocation line.

Example

```
insp_cptc --detect=TCVX-43239 --insp-log=TCVX-43239.log test.cc
```

The log file `TCVX-43239.log` will contain the Inspector messages.

Related information

-

4.3. C Compiler Options

This section lists all C compiler options that are specific to the Inspector. All other options are the same as the C compiler of the TriCore VX-toolset for TriCore v6.2r2.

When you do not specify an option, a default value may become active.

C compiler option: **--detect**

Command line syntax

```
--detect=issue,...
```

Description

This option allows you to enable only a specific set of issue detectors for Inspector. Detectors not listed in this option will be disabled. This option is mutually exclusive with C compiler options **--detect-asm** and **--ignore**.

For the list of issues you can detect, see the release notes of the TASKING TriCore v6.2r2 Inspector. When you specify a wrong issue, the list of issues is also listed on the command line.

Example

To detect if the C compiler issue TCVX-43102 is present, type:

```
insp_ctc --detect=TCVX-43102 test.c
```

Related information

C compiler option **--detect-asm** (Enable assembler comparison issue detector)

C compiler option **--ignore** (Disable issue detectors)

C compiler option: --detect-asm

Command line syntax

`--detect-asm=issue`

Description

With this option the Inspector tool clarifies detection of a certain issue by comparing the assembly source files affected and not affected by that issue after its potential occurrence has been detected. It can only detect one issue at a time. All other detectors will be disabled. This option is mutually exclusive with C compiler options `--detect` and `--ignore`.

For the list of issues you can detect, see the release notes of the TASKING TriCore v6.2r2 Inspector. When you specify a wrong issue, the list of issues is also listed on the command line.

When an assembly difference is detected the following messages can be generated:

```
W994: [INSP] detected change in assembly listing for command: argv
I992: [INSP] asm cmp: assembly listing copies created for analysis.
      original: asm1 fixed: asm2
```

where, *argv* is the tool invocation line and *asm1* and *asm2* are the names of the two differing assembly outputs.

Example

To detect if C compiler issue TCVX-43309 is present by comparing the assembly output, type:

```
insp_ctc --detect-asm=TCVX-43309 test.c
```

Related information

C compiler option `--detect` (Enable issue detectors)

C compiler option `--ignore` (Disable issue detectors)

C compiler option: **--ignore**

Command line syntax

```
--ignore=issue,...
```

Description

This option allows you to disable a specific set of issue detectors for Inspector. Detectors not listed in this option will be enabled. This option is mutually exclusive with C compiler options **--detect** and **--detect-asm**.

For the list of issues you can specify, see the release notes of the TASKING TriCore v6.2r2 Inspector. When you specify a wrong issue, the list of issues is also listed on the command line.

Example

To ignore the issue detector for C compiler issue TCVX-43102 and enable all other issue detectors, type:

```
insp_ctc --ignore=TCVX-43102 test.c
```

Related information

C compiler option **--detect** (Enable issue detectors)

C compiler option **--detect-asm** (Enable assembler comparison issue detector)

C compiler option: --insp-log

Command line syntax

`--insp-log=file`

Description

With this option the C compiler duplicates Inspector detection messages to the specified file. This file is written in append mode, clearing it is the user's responsibility.

Each detection warning is prefixed with the tool's invocation line.

Example

```
insp_ctc --detect=TCVX-43102 --insp-log=TCVX-43102.log test.c
```

The log file `TCVX-43102.log` will contain the Inspector messages.

Related information

-

4.4. Assembler Options

This section lists all assembler options that are specific to the Inspector. All other options are the same as the assembler of the TriCore VX-toolset for TriCore v6.2r2.

When you do not specify an option, a default value may become active.

Assembler option: **--detect**

Command line syntax

`--detect=issue,...`

Description

This option allows you to enable only a specific set of issue detectors for Inspector. Detectors not listed in this option will be disabled. This option is mutually exclusive with assembler option **--ignore**.

For the list of issues you can detect, see the release notes of the TASKING TriCore v6.2r2 Inspector. When you specify a wrong issue, the list of issues is also listed on the command line.

Related information

Assembler option **--ignore** (Disable issue detectors)

Assembler option: **--ignore**

Command line syntax

```
--ignore=issue,...
```

Description

This option allows you to disable a specific set of issue detectors for Inspector. Detectors not listed in this option will be enabled. This option is mutually exclusive with assembler option **--detect**.

For the list of issues you can specify, see the release notes of the TASKING TriCore v6.2r2 Inspector. When you specify a wrong issue, the list of issues is also listed on the command line.

Related information

Assembler option **--detect** (Enable issue detectors)

Assembler option: --insp-log

Command line syntax

`--insp-log=file`

Description

the assembler duplicates Inspector detection messages to the specified file. This file is written in append mode, clearing it is the user's responsibility.

Each detection warning is prefixed with the tool's invocation line.

Example

```
insp_astc --detect=TCVX-xxxx --insp-log=insp_astc.log test.src
```

The log file `insp_astc.log` will contain the Inspector messages.

Related information

-

4.5. Linker Options

This section lists all linker options that are specific to the Inspector. All other options are the same as the linker of the TriCore VX-toolset for TriCore v6.2r2.

When you do not specify an option, a default value may become active.

Linker option: **--detect**

Command line syntax

```
--detect=issue,...
```

Description

This option allows you to enable only a specific set of issue detectors for Inspector. Detectors not listed in this option will be disabled. This option is mutually exclusive with [linker option **--ignore**](#).

For the list of issues you can detect, see the release notes of the TASKING TriCore v6.2r2 Inspector. When you specify a wrong issue, the list of issues is also listed on the command line.

Example

To detect if the linker issue TCVX-40469 is present, type:

```
insp_ltc --detect=TCVX-40469 test.o
```

Related information

[Linker option **--ignore**](#) (Disable issue detectors)

Linker option: `--ignore`

Command line syntax

```
--ignore=issue,...
```

Description

This option allows you to disable a specific set of issue detectors for Inspector. Detectors not listed in this option will be enabled. This option is mutually exclusive with [linker option `--detect`](#).

For the list of issues you can specify, see the release notes of the TASKING TriCore v6.2r2 Inspector. When you specify a wrong issue, the list of issues is also listed on the command line.

Example

To ignore the issue detector for linker issue TCVX-40469 and enable all other issue detectors, type:

```
insp_ltc --ignore=TCVX-40469 test.o
```

Related information

[Linker option `--detect`](#) (Enable issue detectors)

Linker option: --insp-log

Command line syntax

`--insp-log=file`

Description

With this option the linker duplicates Inspector detection messages to the specified file. This file is written in append mode, clearing it is the user's responsibility.

Each detection warning is prefixed with the tool's invocation line.

Example

```
insp_ltc --detect=TCVX-40469 --insp-log=TCVX-40469.log test.o
```

The log file `TCVX-40469.log` will contain the Inspector messages.

Related information

-